

SUMACHAY LIFTS

Parts Catalog

SST15+

Exploded diagrams and part references for the SST15+ electric pallet stacker

Revision	Language	Parts & support
v1.0 · 2026-10-16	EN	sales@sumachay.com

How to request a part

1. Find your **model** and **serial number** on the data plate of your machine.
2. Find the **figure** that shows the area of the machine, then the **item number** on the diagram.
3. Note the **Sumachay reference** from the parts table (for example SST-F01-06).
4. Email **sales@sumachay.com** with your model, serial number, figure, item number and Sumachay reference.
A photo of the part helps.

Contact Sumachay for parts availability and pricing.

Reading the "Applies to" column

SST15+	Fits the SST15+ (3500 mm mast). Rows marked "3.5 m version" are the 3500 mm mast parts.
Match your fork size	Several fork lengths exist; choose the one that matches your forks.
Confirm version with service	Two or more versions exist (for example with or without remote control, or drive unit version A or B); confirm which one your unit uses.
Confirm with service	Varies by unit; confirm with Sumachay before ordering.

Item numbers with a letter (for example 11B) are alternate versions of the same item. Confirm which version your unit uses before ordering.

Items marked K1, K2... are service kits or sub-assemblies that are not called out on the diagram. An item shown on a diagram but not listed in its table is supplied only as part of an assembly or kit; contact Sumachay.

SST15-C+ owners: confirm every part with Sumachay service before ordering.

Diagrams show a typical configuration; your unit may differ.

Contents

- | | |
|---|---|
| 1. Figure 1 — Handle assembly | 10. Figure 10 — Lift cylinder assembly |
| 2. Figure 2 — Handle control box | 11. Figure 11 — Frame |
| 3. Figure 3 — Handle upper cover assembly | 12. Figure 12 — Electrical panel assembly |
| 4. Figure 4 — Potentiometer assembly | 13. Figure 13 — Load wheel assembly |
| 5. Figure 5 — Drive system | 14. Figure 14 — Covers and switch panel |
| 6. Figure 6 — Drive unit (version A) | 15. Figure 15 — Inner mast assembly |
| 7. Figure 7 — Drive unit (version B) | 16. Figure 16 — Fork carriage and forks |
| 8. Figure 8 — Hydraulic system (Ø55 cylinder) | 17. Figure 17 — Wiring harnesses |
| 9. Figure 9 — Hydraulic unit parts | 18. Figure 18 — Power cables and programmer |

Figure 1 — Handle assembly

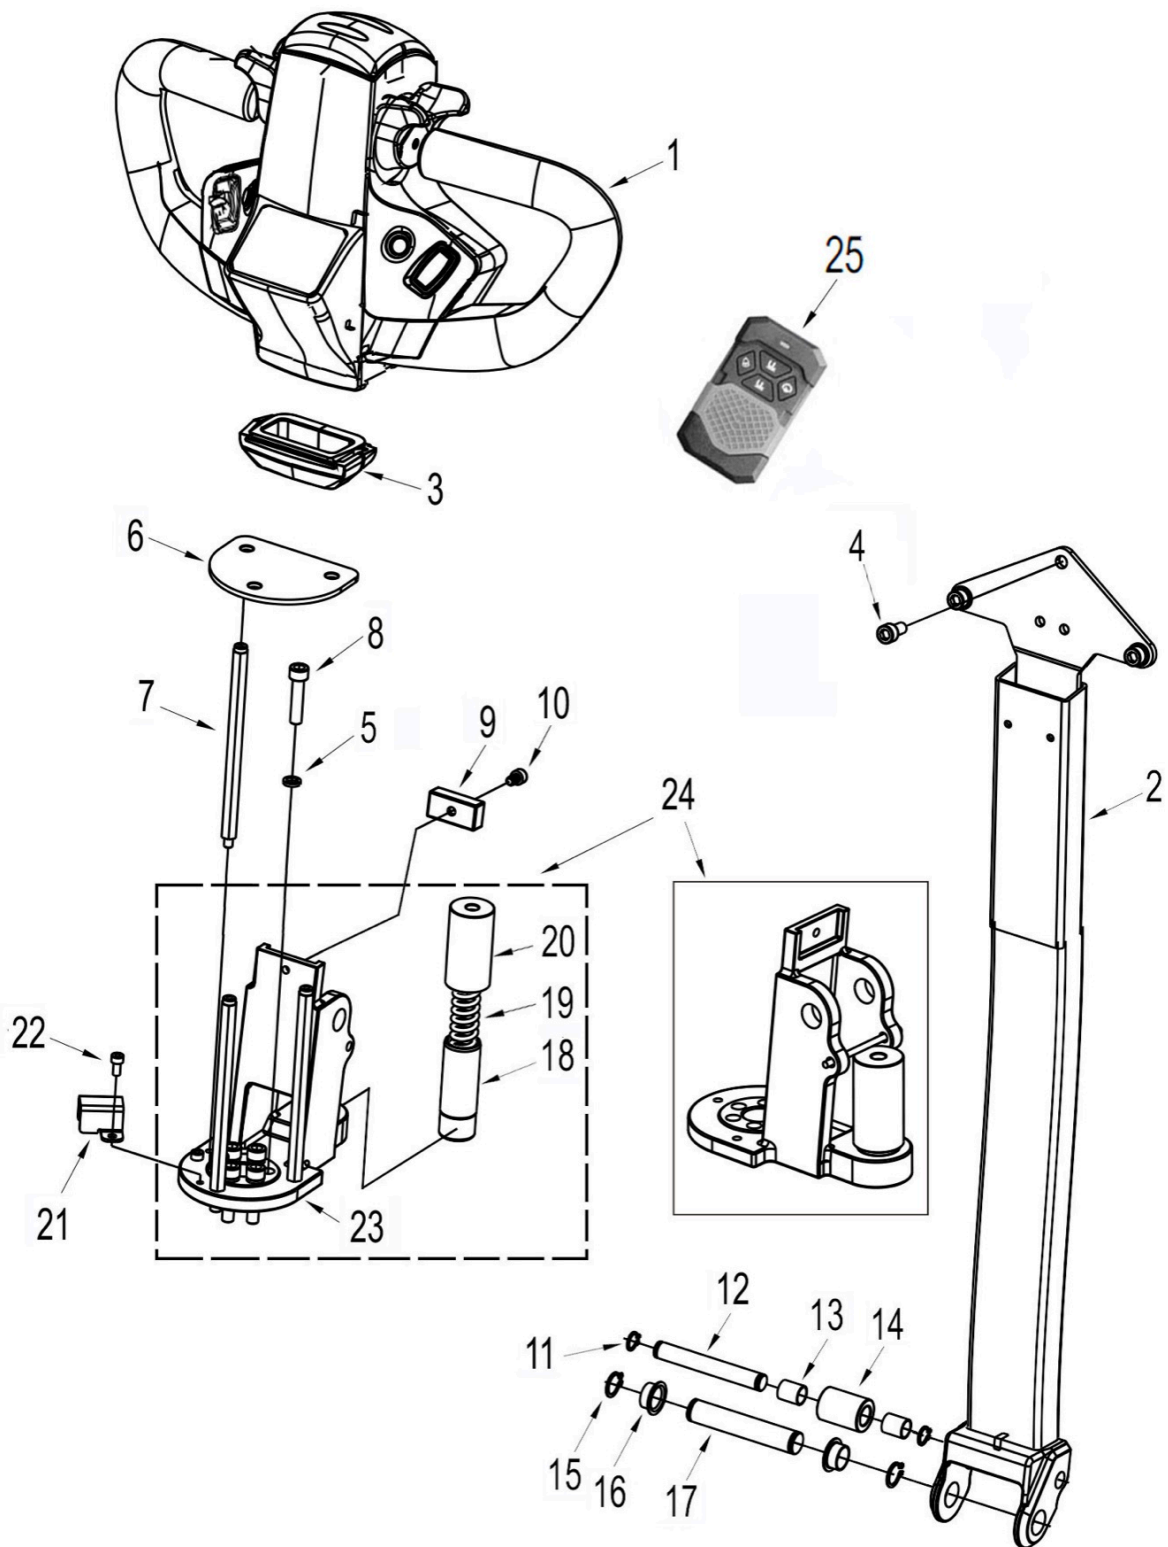


Figure 1 — Handle assembly: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F01-01	Handle assembly (without remote control)		1	Confirm version with service
1B	SST-F01-01B	Handle assembly (with remote control)		1	Confirm version with service
2	SST-F01-02	Handle body		1	SST15+
3	SST-F01-03	Transition sleeve		1	SST15+
4	SST-F01-04	Screw M8X16	M8X16	3	SST15+
5	SST-F01-05	Washer	Ø8	3	SST15+
6	SST-F01-06	Guide plate		1	SST15+
7	SST-F01-07	Column		3	SST15+
8	SST-F01-08	Screw M8X35	M8X35	6	SST15+
9	SST-F01-09	Cushion block		1	SST15+
10	SST-F01-10	Screw M6X10	M6X10	1	SST15+
11	SST-F01-11	Shaft ring Ø12	Ø12	2	SST15+
12	SST-F01-12	Roller shaft Ø12*87	Ø12*87	1	SST15+
13	SST-F01-13	Self-lubricating bearing Ø12*Ø14*16	Ø12*Ø14*16	2	SST15+
14	SST-F01-14	Roller Ø14*Ø24*33	Ø14*Ø24*33	1	SST15+
15	SST-F01-15	Shaft ring Ø16	Ø16	2	SST15+
16	SST-F01-16	Self-lubricating bearing Ø16*Ø18*14	Ø16*Ø18*14	2	SST15+
17	SST-F01-17	Handle mounting shaft Ø16*87	Ø16*87	1	SST15+
18	SST-F01-18	Spring bottom sleeve		1	SST15+
19	SST-F01-19	Spring		1	SST15+
20	SST-F01-20	Spring upper sleeve		1	SST15+
21	SST-F01-21	Clamp		1	SST15+
22	SST-F01-22	Screw M5X8	M5X8	2	SST15+
23	SST-F01-23	Handle seat		1	SST15+
24	SST-F01-24	Handle seat assembly	Confirm contents with service	1	SST15+
25	SST-F01-25	Remote control		2	Confirm version with service

Figure 2 — Handle control box

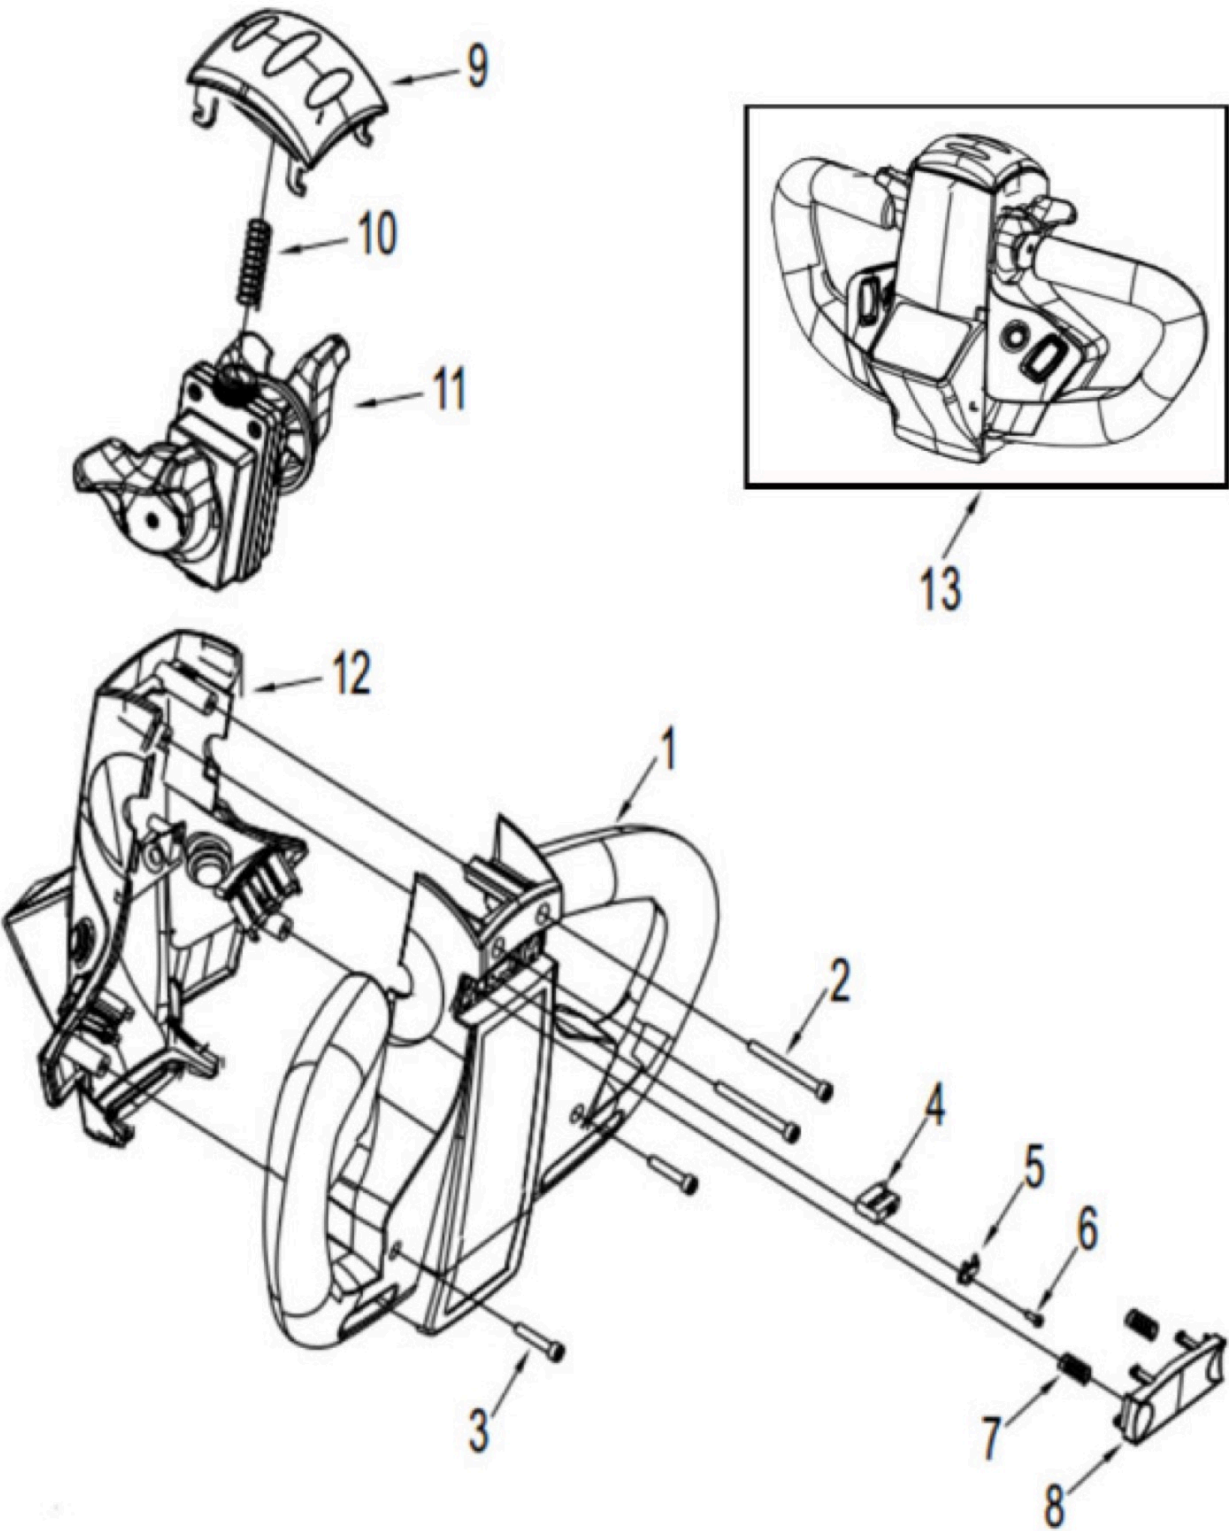


Figure 2 — Handle control box: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F02-01	Lower cover of handle		1	SST15+
2	SST-F02-02	Screw		2	SST15+
3	SST-F02-03	Screw		2	SST15+
4	SST-F02-04	Inching switch		1	SST15+
5	SST-F02-05	Fixed plate of inching switch		1	SST15+
6	SST-F02-06	Screw M3*10	M3*10	1	SST15+
7	SST-F02-07	Spring		2	SST15+
8	SST-F02-08	Low-speed switch cover		1	SST15+
9	SST-F02-09	Emergency reverse button		1	SST15+
10	SST-F02-10	Spring		1	SST15+
11	SST-F02-11	Potentiometer assembly		1	SST15+
12	SST-F02-12	Upper cover assembly (without remote control)		1	Confirm version with service
12B	SST-F02-12B	Upper cover assembly (with remote control)		1	Confirm version with service
13	SST-F02-13	Handle assembly (without remote control)		1	Confirm version with service
13B	SST-F02-13B	Handle assembly (with remote control)		1	Confirm version with service

Figure 3 — Handle upper cover assembly

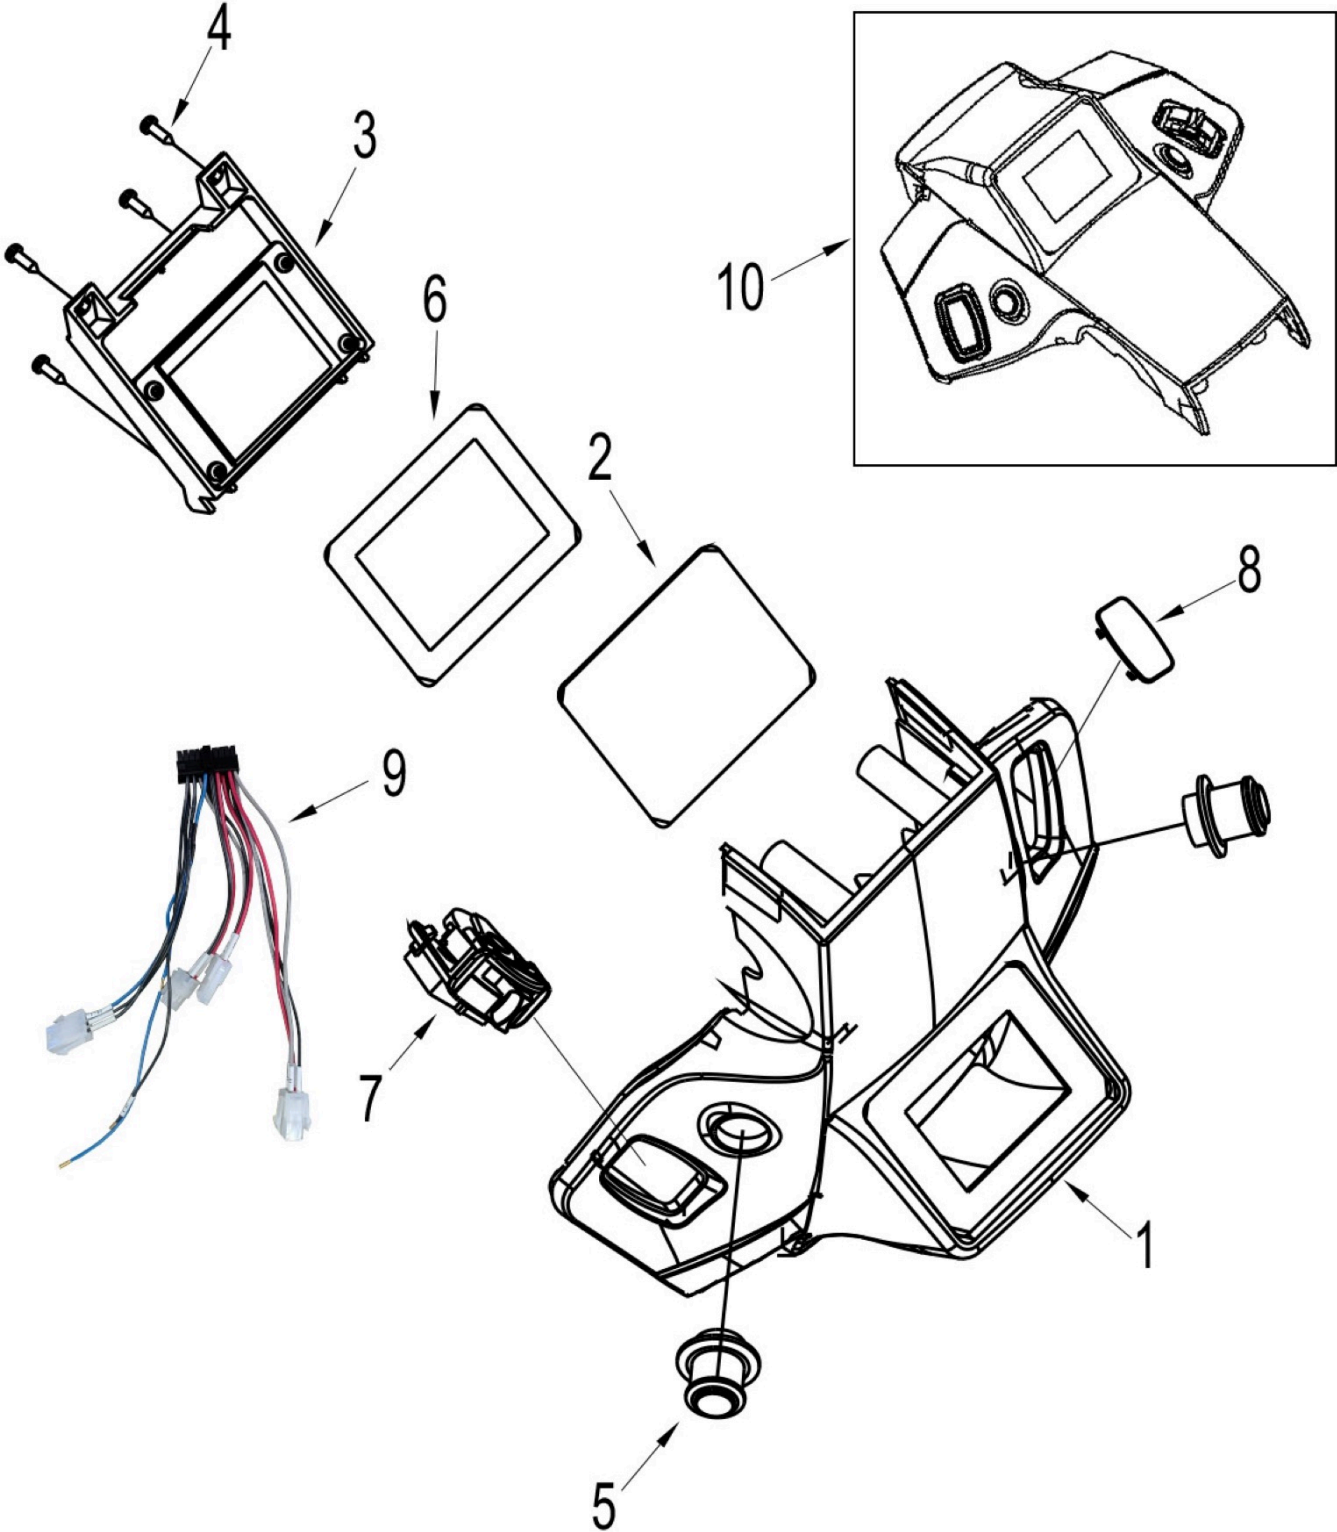


Figure 3 — Handle upper cover assembly: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F03-01	Upper cover of handle		1	SST15+
2	SST-F03-02	Monitor cover		1	SST15+
3	SST-F03-03	Monitor assembly (without remote control)		1	Confirm version with service
3B	SST-F03-03B	Monitor assembly (with remote control)		1	Confirm version with service
4	SST-F03-04	Screw M3X10	M3*10	4	SST15+
5	SST-F03-05	Horn button		2	SST15+
6	SST-F03-06	Double-sided adhesive pad		1	SST15+
7	SST-F03-07	Stepless speed control switch		1	SST15+
8	SST-F03-08	Cover		1	SST15+
9	SST-F03-09	Monitor wire harness		1	SST15+
10	SST-F03-10	Upper cover assembly (without remote control)		1	Confirm version with service
10B	SST-F03-10B	Upper cover assembly (with remote control)		1	Confirm version with service

Figure 4 — Potentiometer assembly

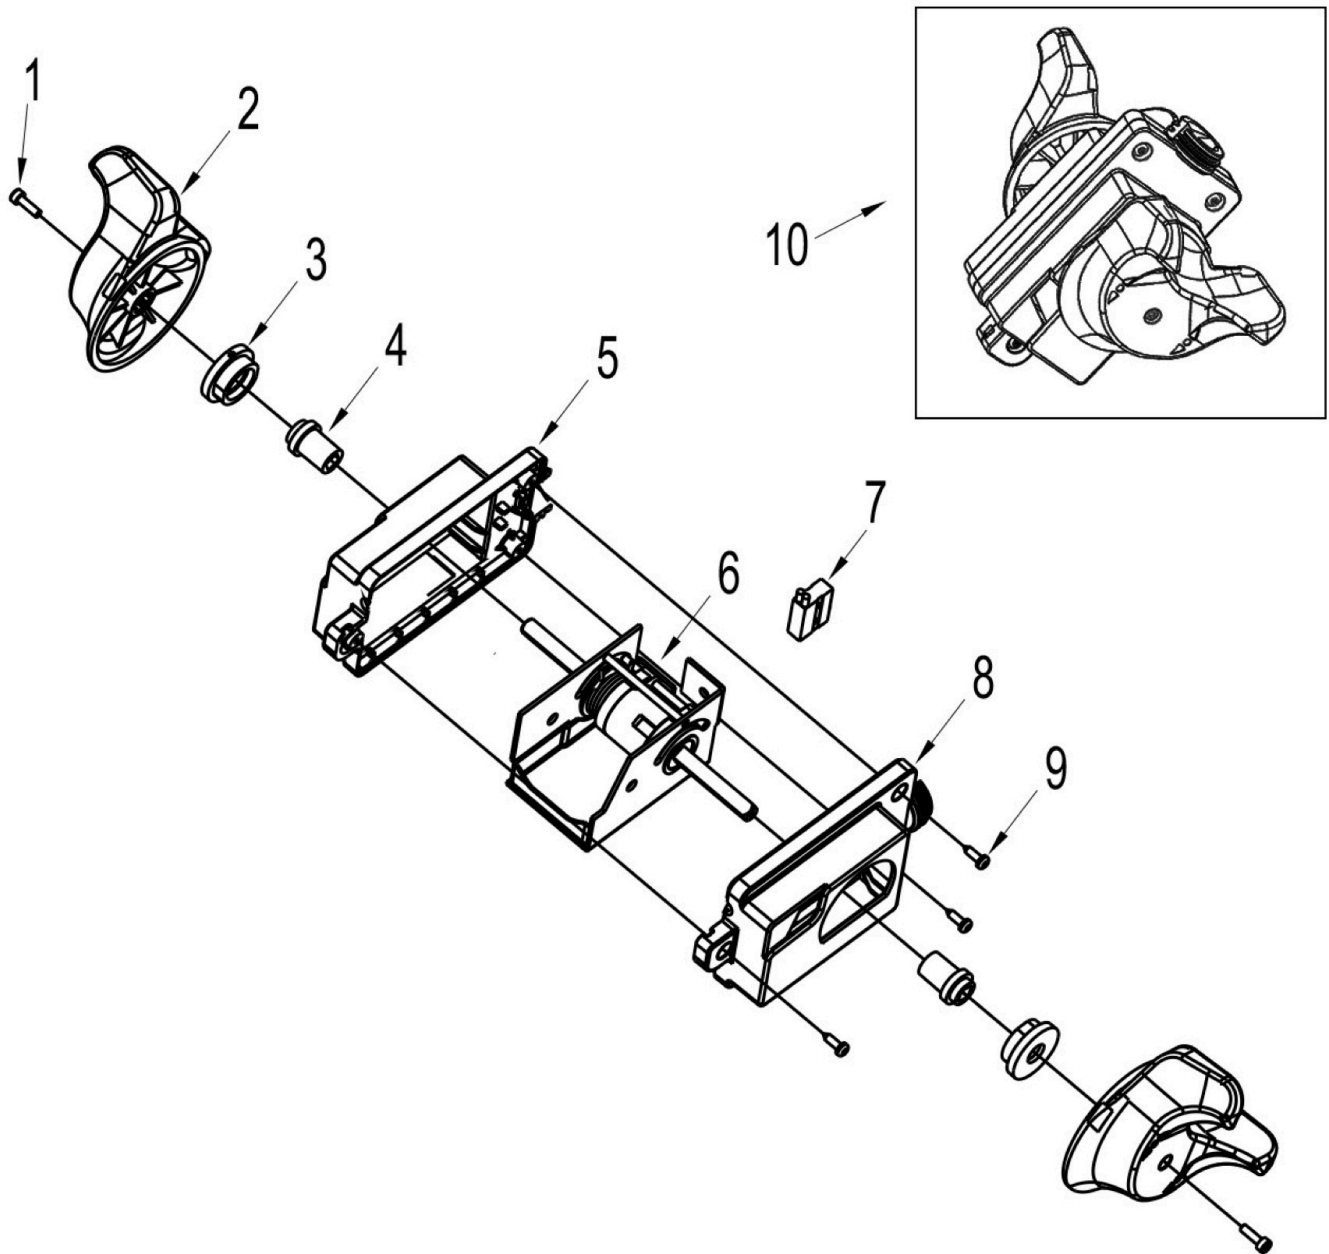


Figure 4 — Potentiometer assembly: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F04-01	Screw M3*12	M3*12	2	SST15+
2	SST-F04-02	Control knob		2	SST15+
3	SST-F04-03	External spacer		2	SST15+
4	SST-F04-04	Interior spacer		2	SST15+
5	SST-F04-05	Right cover of potentiometer		1	SST15+
6	SST-F04-06	Potentiometer		1	SST15+
7	SST-F04-07	Inching switch		1	SST15+
8	SST-F04-08	Left cover of potentiometer		1	SST15+
9	SST-F04-09	Screw M3X10	M3*10	3	SST15+
10	SST-F04-10	Potentiometer assembly		1	SST15+

Figure 5 — Drive system

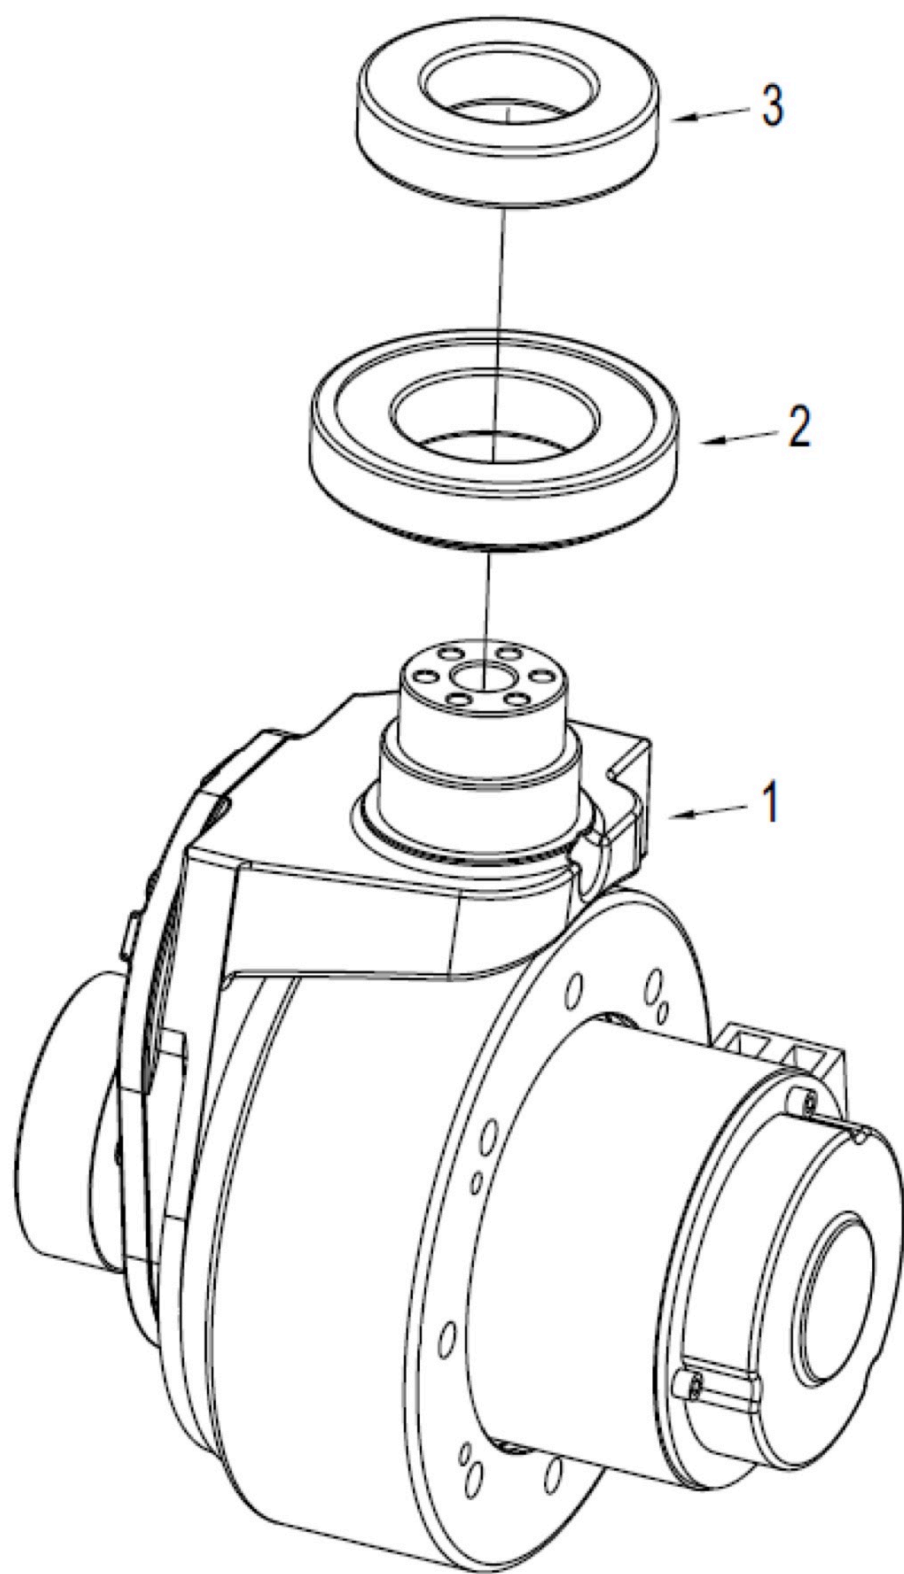


Figure 5 — Drive system: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F05-01	Drive unit assembly (version A, Figure 6)		1	Confirm version with service
1B	SST-F05-01B	Drive unit assembly (version B, Figure 7)		1	Confirm version with service
2	SST-F05-02	Bearing 30212	30212	1	SST15+
3	SST-F05-03	Bearing 6210-2RS	6210-2RS	1	SST15+

Figure 6 — Drive unit (version A)

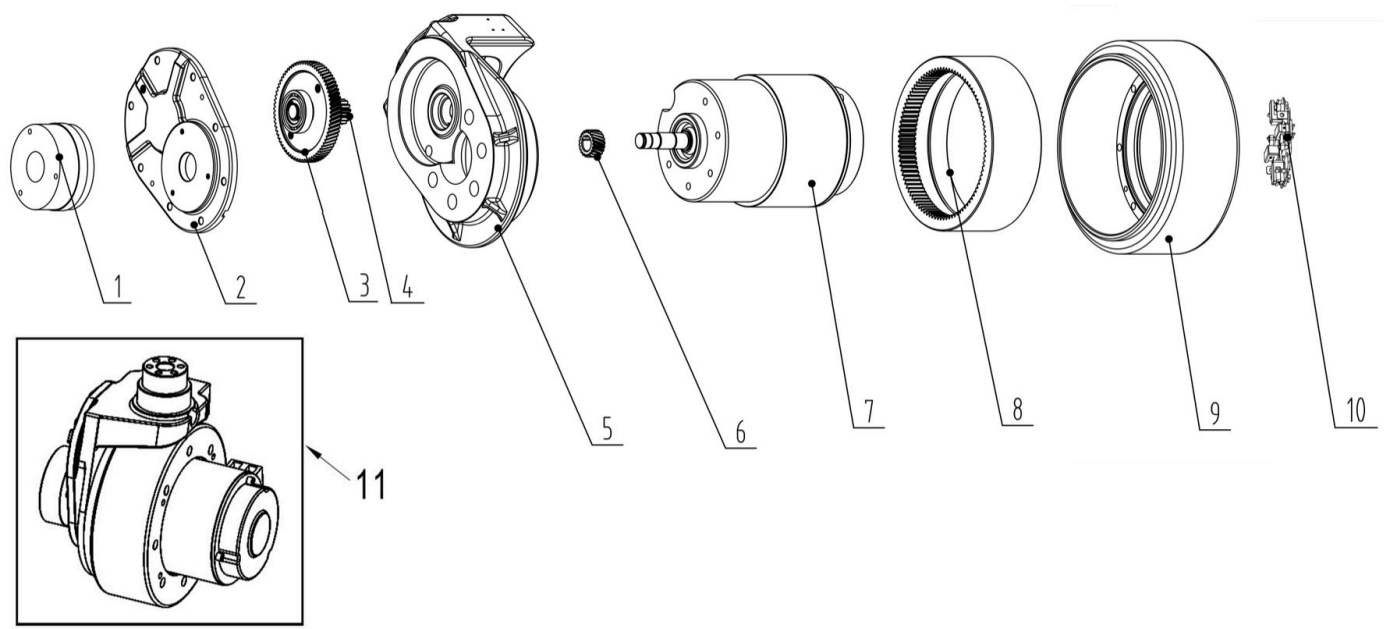


Figure 6 — Drive unit (version A): parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F06-01	Brake assembly		1	Confirm version with service
2	SST-F06-02	Tank cover		1	Confirm version with service
3	SST-F06-03	Large helical gear		1	Confirm version with service
4	SST-F06-04	Pinion spur gear		1	Confirm version with service
5	SST-F06-05	Box		1	Confirm version with service
6	SST-F06-06	Helical pinion		1	Confirm version with service
7	SST-F06-07	Drive motor		1	Confirm version with service
8	SST-F06-08	Internal gear		1	Confirm version with service
9	SST-F06-09	Drive wheel Ø210×70	Ø210×70	1	Confirm version with service
10	SST-F06-10	Carbon brush assembly		1	Confirm version with service
11	SST-F06-11	Drive unit assembly (version A)		1	Confirm version with service

Figure 7 — Drive unit (version B)

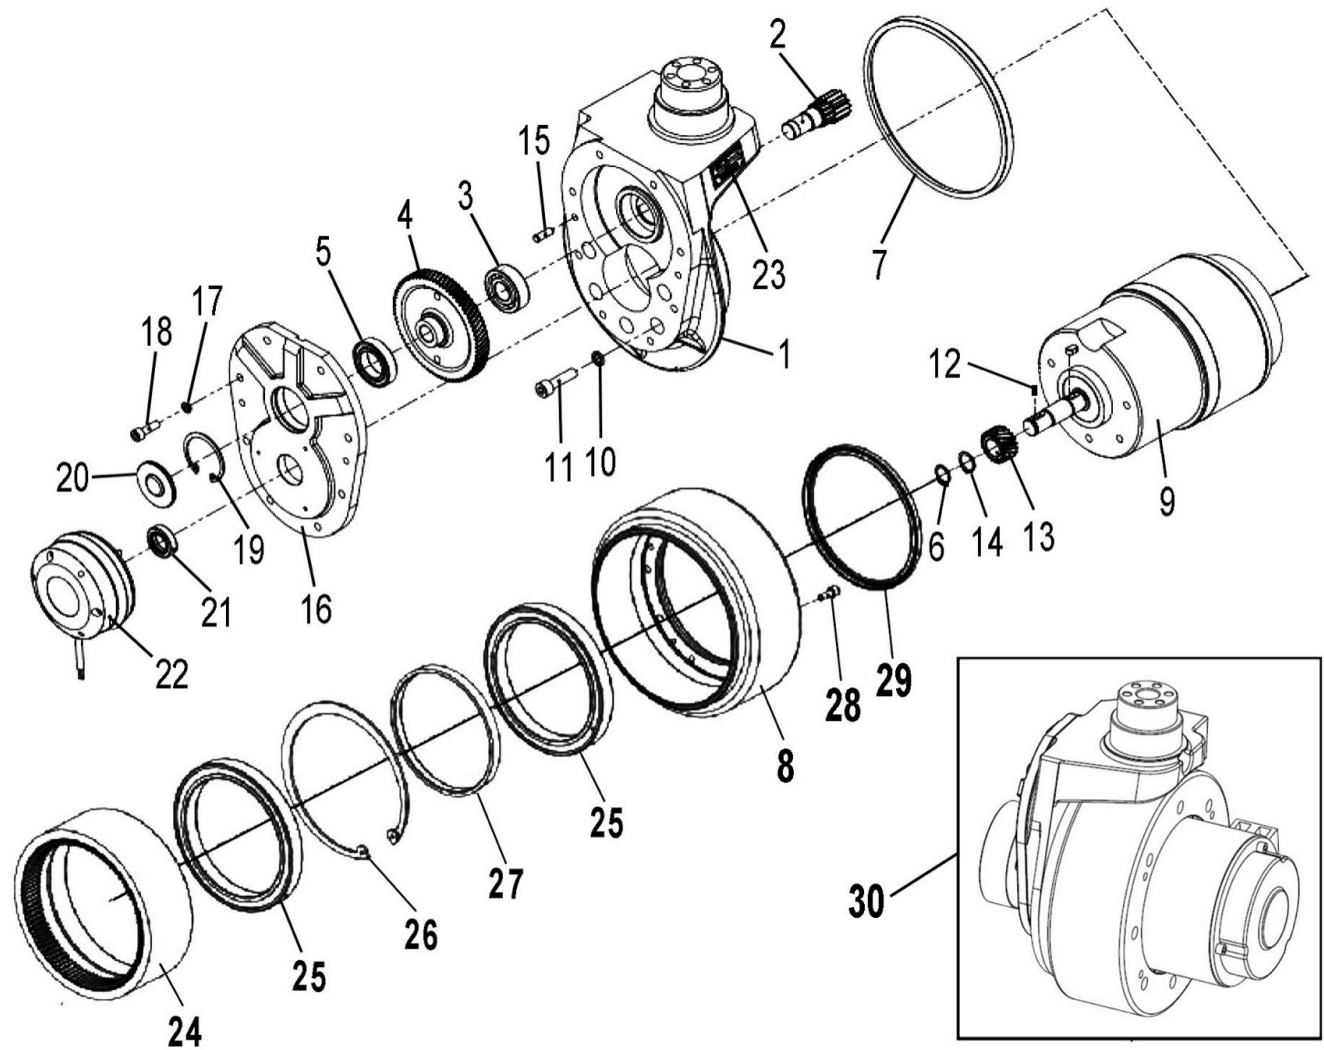


Figure 7 — Drive unit (version B): parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F07-01	Gearbox body		1	Confirm version with service
2	SST-F07-02	Gear		1	Confirm version with service
3	SST-F07-03	Bearing TM6203	TM6203	1	Confirm version with service
4	SST-F07-04	Gear		1	Confirm version with service
5	SST-F07-05	Bearing TM61905-2Z	TM61905-2Z	1	Confirm version with service
6	SST-F07-06	Circlip	15X1	1	Confirm version with service
7	SST-F07-07	Oil seal	V-160L	1	Confirm version with service
8	SST-F07-08	Drive wheel Ø210*70	Ø210*70	1	Confirm version with service
9	SST-F07-09	Drive motor 750 W		1	Confirm version with service
10	SST-F07-10	Spring washer 8X2.1	8X2.1	8	Confirm version with service
11	SST-F07-11	Screw M8X30	M8X30	8	Confirm version with service
12	SST-F07-12	Flat key 5X5X12	5X5X12	1	Confirm version with service
13	SST-F07-13	Gear		1	Confirm version with service
14	SST-F07-14	Circlip 16X1	16X1	1	Confirm version with service
15	SST-F07-15	Locating pin	Ø6X18	1	Confirm version with service
16	SST-F07-16	Gearbox cover		1	Confirm version with service
17	SST-F07-17	Spring washer 6X1.6	6X1.6	6	Confirm version with service
18	SST-F07-18	Screw M6X20	M6X20	6	Confirm version with service
19	SST-F07-19	Circlip 42X1.5	42X1.5	1	Confirm version with service
20	SST-F07-20	Cover		1	Confirm version with service
21	SST-F07-21	Oil seal TC16X28X7	TC16X28X7	1	Confirm version with service
22	SST-F07-22	Brake assembly	24 V DC, 8 N.m, 400 mm	1	Confirm version with service
24	SST-F07-24	Inner gear ring		1	Confirm version with service
25	SST-F07-25	Bearing 61824-2RS	61824-2RS	2	Confirm version with service
26	SST-F07-26	Circlip 150×3	150×3	1	Confirm version with service

Item	Sumachay ref.	Description	Spec	Qty	Applies to
27	SST-F07-27	Spacer ring		1	Confirm version with service
28	SST-F07-28	Screw M6X16	M6X16	8	Confirm version with service
29	SST-F07-29	Oil seal KC 130X140X8	KC 130X140X8	1	Confirm version with service
30	SST-F07-30	Drive unit assembly (version B)		1	Confirm version with service

Figure 8 — Hydraulic system (Ø55 cylinder)

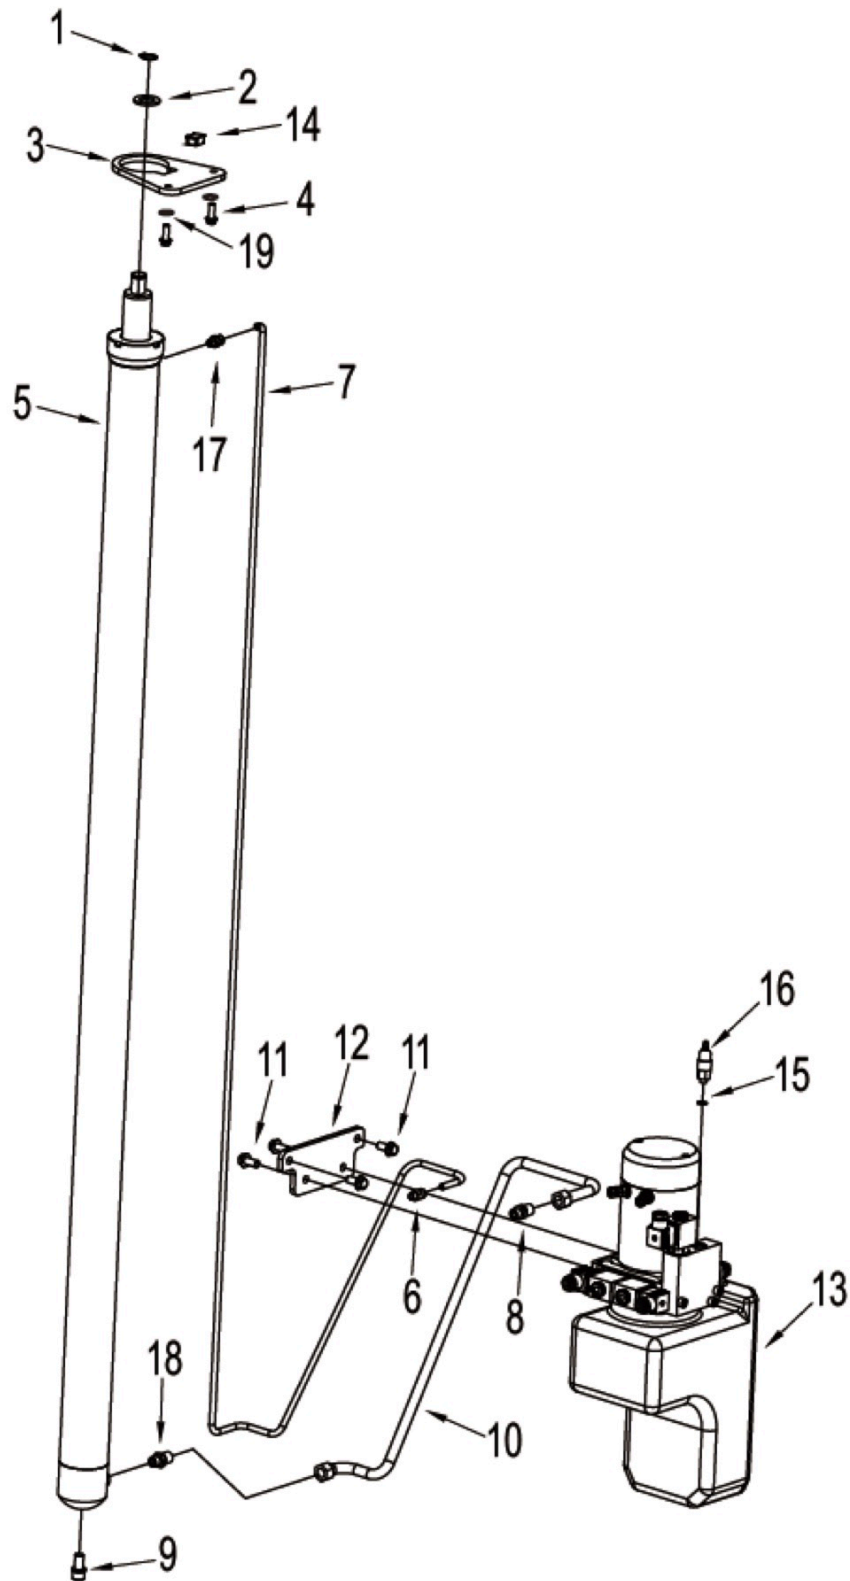


Figure 8 — Hydraulic system (Ø55 cylinder): parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F08-01	Shaft ring Ø20	Ø20	1	SST15+
2	SST-F08-02	Washer	20	1	SST15+
3	SST-F08-03	Cylinder retainer plate		1	SST15+
4	SST-F08-04	Screw M8X25	M8X25	2	SST15+
5	SST-F08-05	Cylinder assembly Ø55 (3.5 m version)		1	SST15+
6	SST-F08-06	Oil return pipe connector		2	SST15+
7	SST-F08-07	Oil return pipe (3.5 m version)		1	SST15+
8	SST-F08-08	High-pressure oil pipe connector		2	SST15+
9	SST-F08-09	Screw M12X25	M12X25	1	SST15+
10	SST-F08-10	High pressure oil pipe		1	SST15+
11	SST-F08-11	Screw M10X25	M10X25	4	SST15+
12	SST-F08-12	Mounting plate		1	SST15+
13	SST-F08-13	Hydraulic unit assembly (2.5 kW)		1	SST15+
14	SST-F08-14	Cylinder head block		1	SST15+
15	SST-F08-15	Gasket		1	SST15+
16	SST-F08-16	Sensor switch		1	SST15+
17	SST-F08-17	Return oil pipe connector		1	SST15+
18	SST-F08-18	Oil pipe connector and pipe-rupture valve		1	SST15+
19	SST-F08-19	Anti-loosening washer Ø8.5XØ16.5	Ø8.5XØ16.5	2	SST15+

Figure 9 — Hydraulic unit parts

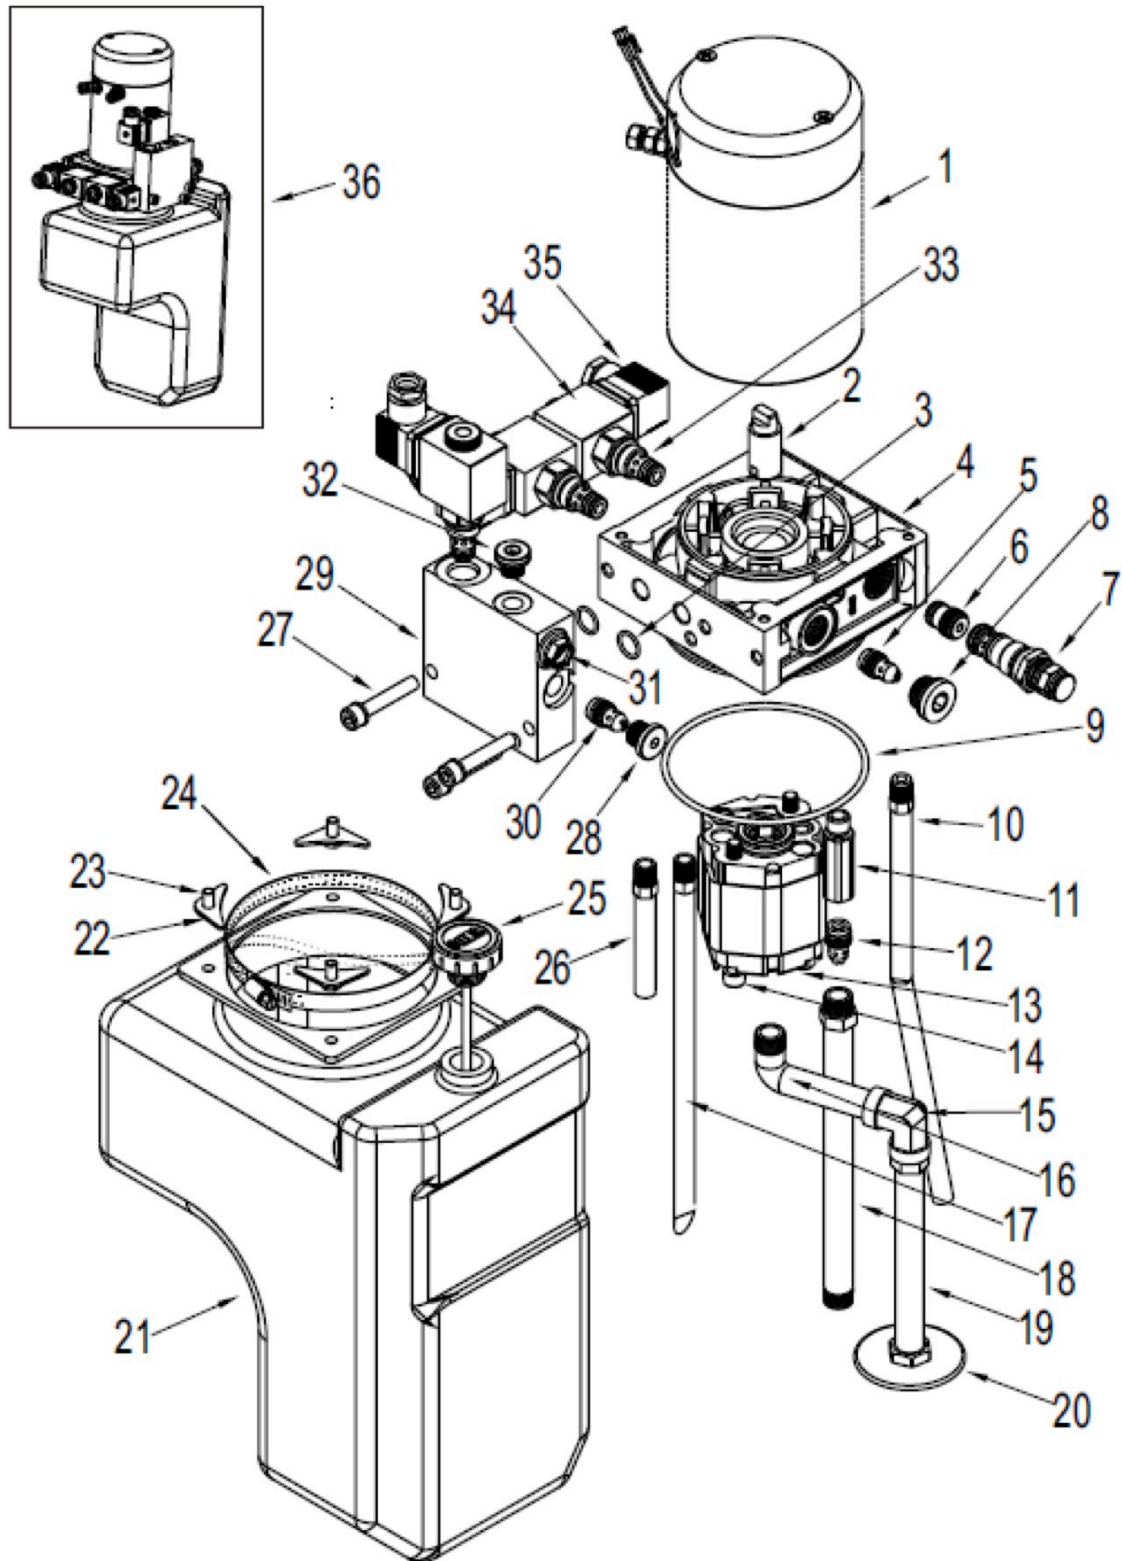


Figure 9 — Hydraulic unit parts: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F09-01	Hydraulic pump motor 2.5 kW		1	SST15+
2	SST-F09-02	Coupling		1	SST15+
3	SST-F09-03	O-ring Ø13.5X1.8	Ø13.5X1.8	2	SST15+
4	SST-F09-04	Valve block		1	SST15+
5	SST-F09-05	Pressure compensating valve		1	SST15+
6	SST-F09-06	Check valve		1	SST15+
7	SST-F09-07	Relief valve		1	SST15+
8	SST-F09-08	Plug		1	SST15+
9	SST-F09-09	O-ring Ø112X3.55	Ø112X3.55	1	SST15+
10	SST-F09-10	Oil return pipe		1	SST15+
11	SST-F09-11	Union joint		1	SST15+
12	SST-F09-12	Pressure relief valve		1	SST15+
13	SST-F09-13	Gear pump		1	SST15+
14	SST-F09-14	Screw		2	SST15+
15	SST-F09-15	Union joint		1	SST15+
16	SST-F09-16	Oil suction pipe		1	SST15+
17	SST-F09-17	Oil return pipe		1	SST15+
18	SST-F09-18	Oil suction pipe		1	SST15+
19	SST-F09-19	Oil suction pipe		1	SST15+
20	SST-F09-20	Oil suction screen		1	SST15+
21	SST-F09-21	Plastic oil tank		1	SST15+
22	SST-F09-22	Pad		4	SST15+
23	SST-F09-23	Screw M6X14	M6X14	4	SST15+
24	SST-F09-24	Clamp		1	SST15+
25	SST-F09-25	Oil tank cap		1	SST15+
26	SST-F09-26	Oil return pipe		1	SST15+
27	SST-F09-27	Screw M8X45	M8X45	3	SST15+
28	SST-F09-28	Plug		1	SST15+
29	SST-F09-29	Transition valve		1	SST15+
30	SST-F09-30	Pressure relief valve		1	SST15+
31	SST-F09-31	Plug		1	SST15+
32	SST-F09-32	Plug		1	SST15+
33	SST-F09-33	Solenoid valve cartridge		3	SST15+
34	SST-F09-34	Coil		3	SST15+
35	SST-F09-35	Plug		3	SST15+
36	SST-F09-36	Hydraulic unit assembly		1	SST15+

Figure 10 — Lift cylinder assembly

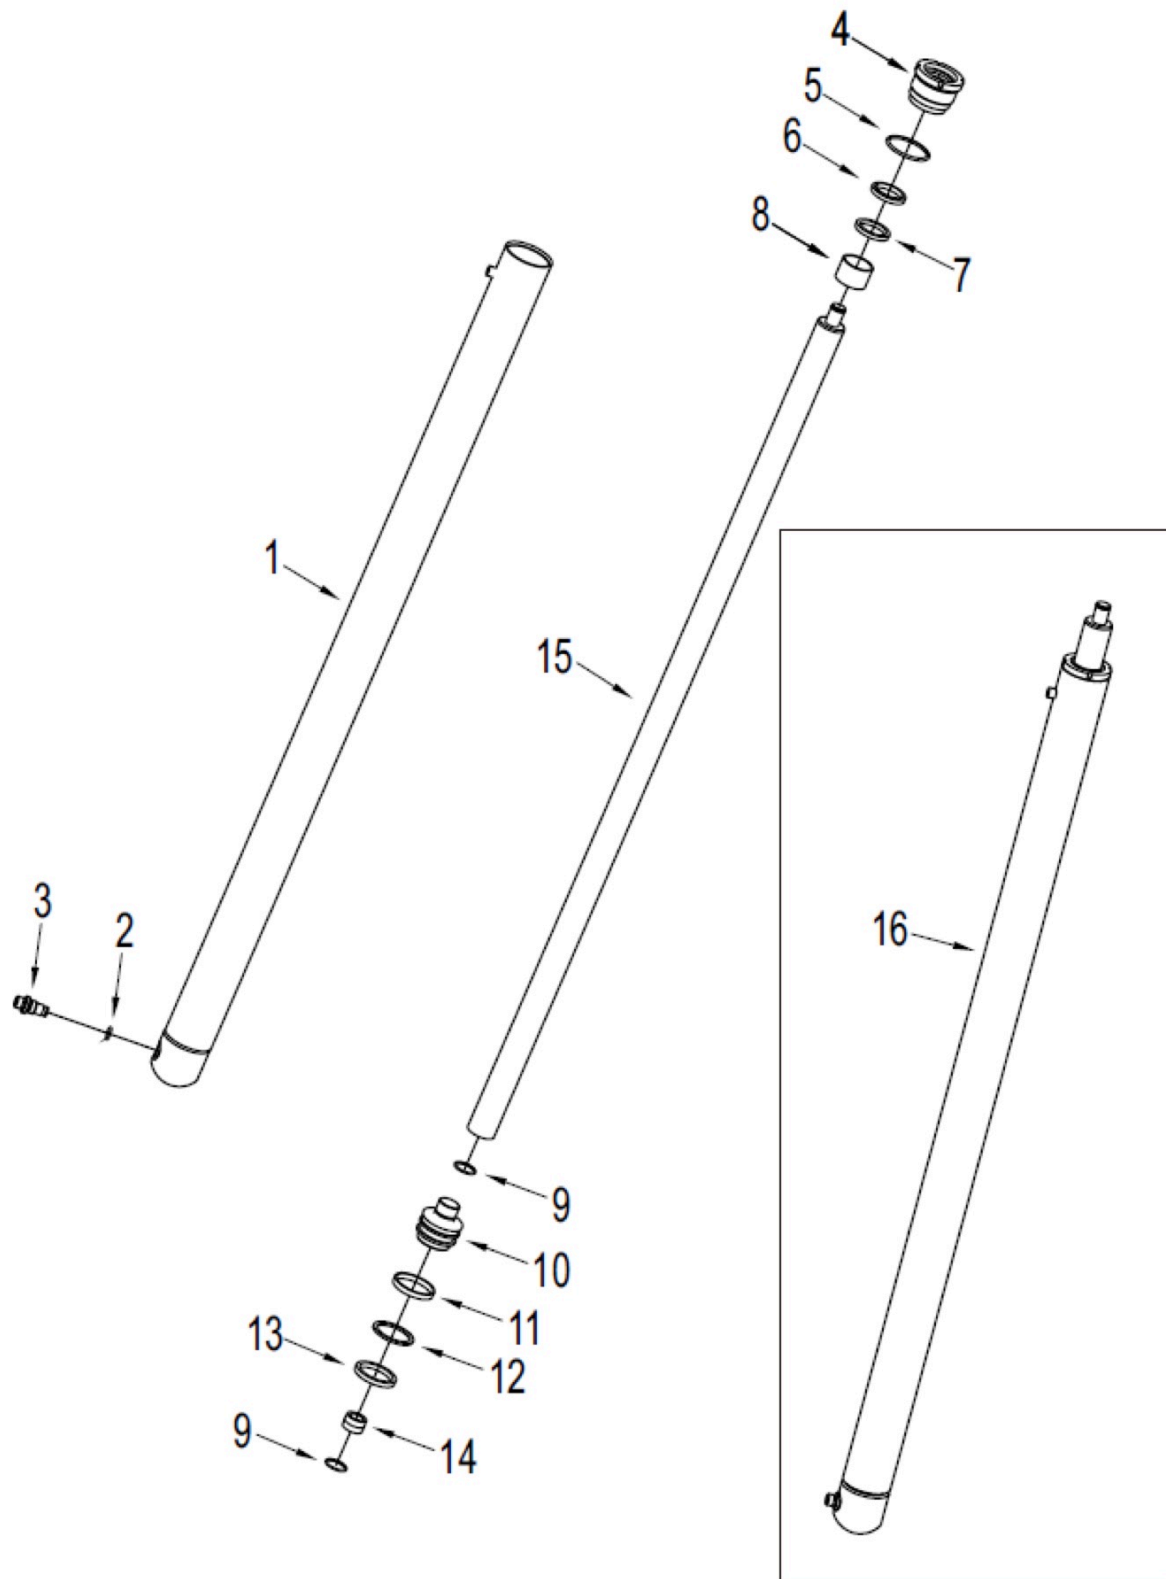


Figure 10 — Lift cylinder assembly: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F10-01	Cylinder barrel		1	SST15+
2	SST-F10-02	O-ring Ø13.2X2.65		1	SST15+
3	SST-F10-03	Oil pipe connector and pipe-rupture valve		1	SST15+
4	SST-F10-04	Guide sleeve		1	SST15+
5	SST-F10-05	O-ring Ø56X2.65		1	SST15+
6	SST-F10-06	Dust ring DH40		1	SST15+
7	SST-F10-07	Sealing ring UHS40X50X6		2	SST15+
8	SST-F10-08	Bush		1	SST15+
9	SST-F10-09	Snap ring 30		2	SST15+
10	SST-F10-10	Plunger		1	SST15+
11	SST-F10-11	Guide belt Ø55X50X8		1	SST15+
12	SST-F10-12	Ring Ø55X45X3		1	SST15+
13	SST-F10-13	Seal washer Ø55X45X6		1	SST15+
14	SST-F10-14	Bush		1	SST15+
15	SST-F10-15	Piston rod (3.5 m version)		1	SST15+
16	SST-F10-16	Lift cylinder assembly (3.5 m version)		1	SST15+
17	SST-F10-17	Seal kit		1	SST15+

Figure 11 — Frame

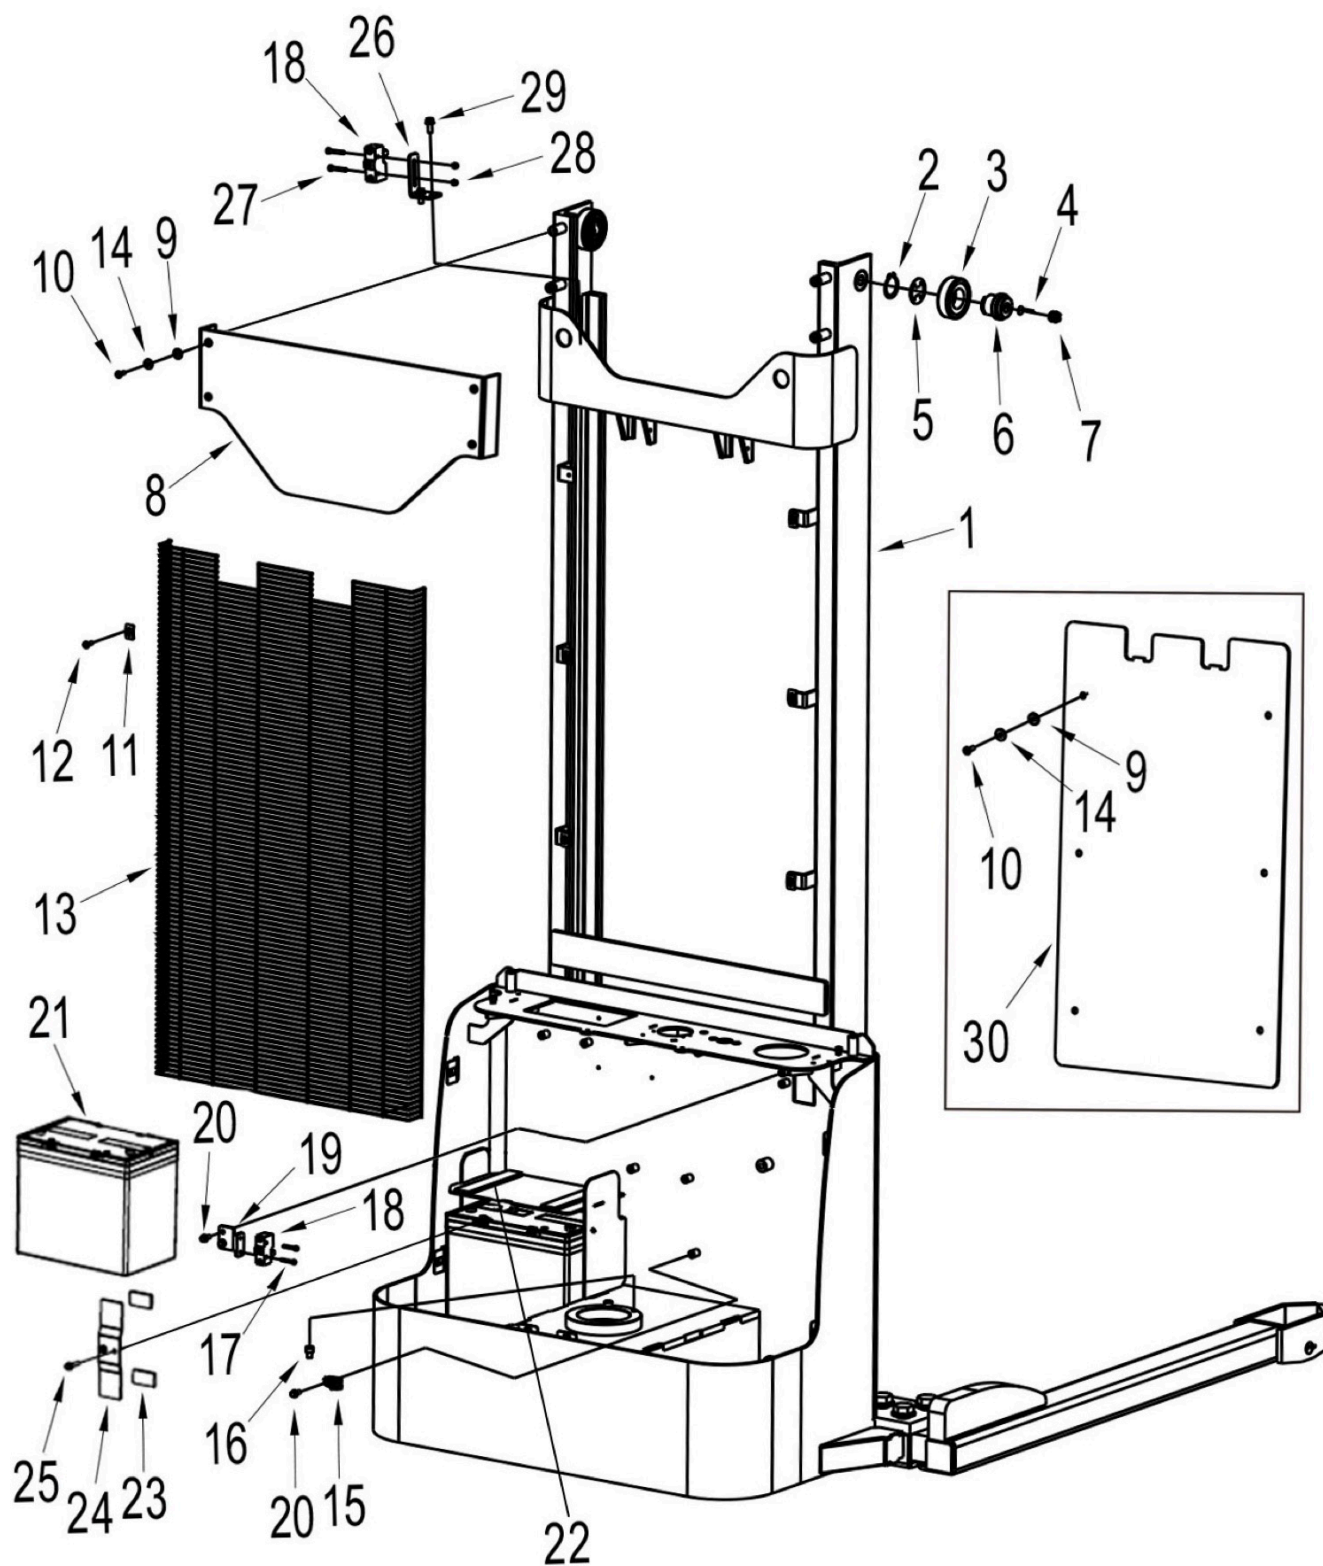


Figure 11 — Frame: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F11-01	Frame	Varies by mast height	1	Confirm with service
2	SST-F11-02	Shaft ring	35	2	SST15+
3	SST-F11-03	Contact roller	Ø70*22.5	2	SST15+
4	SST-F11-04	Locating piece		2	SST15+
5	SST-F11-05	Baffle		2	SST15+
6	SST-F11-06	Small roller assembly		2	SST15+
7	SST-F11-07	Adjusting screw M16X15	M16X15	2	SST15+
8	SST-F11-08	Plexiglass cover		1	SST15+
10	SST-F11-10	Screw M5X16	M5X16	4	SST15+
11	SST-F11-11	Heel block		6	SST15+
12	SST-F11-12	Screw	M5X16	6	SST15+
13	SST-F11-13	Iron mesh cover (3.5 m version)		1	SST15+
14	SST-F11-14	Shim		4	SST15+
15	SST-F11-15	Cable clamp		1	SST15+
16	SST-F11-16	Screw	M8X10	2	SST15+
17	SST-F11-17	Screw	M4X25	2	SST15+
18	SST-F11-18	Lift speed limit switch		2	SST15+
19	SST-F11-19	Mounting base		1	SST15+
20	SST-F11-20	Screw M6X16	M6X16	2	SST15+
21	SST-F11-21	Lithium battery pack	Capacity varies by unit; confirm with service	Confirm	Confirm with service
22	SST-F11-22	Heel block		2	SST15+
23	SST-F11-23	Pin		1	SST15+
24	SST-F11-24	Plate		1	SST15+
25	SST-F11-25	Screw M6X25	M6X25	1	SST15+
26	SST-F11-26	Mounting base		1	SST15+
27	SST-F11-27	Screw M4X30	M4X30	2	SST15+
28	SST-F11-28	Nut M4	M4	2	SST15+
29	SST-F11-29	Screw M6X12	M6X12	4	SST15+
30	SST-F11-30	Plastic cover (3.5 m version)		1	SST15+

Figure 12 — Electrical panel assembly

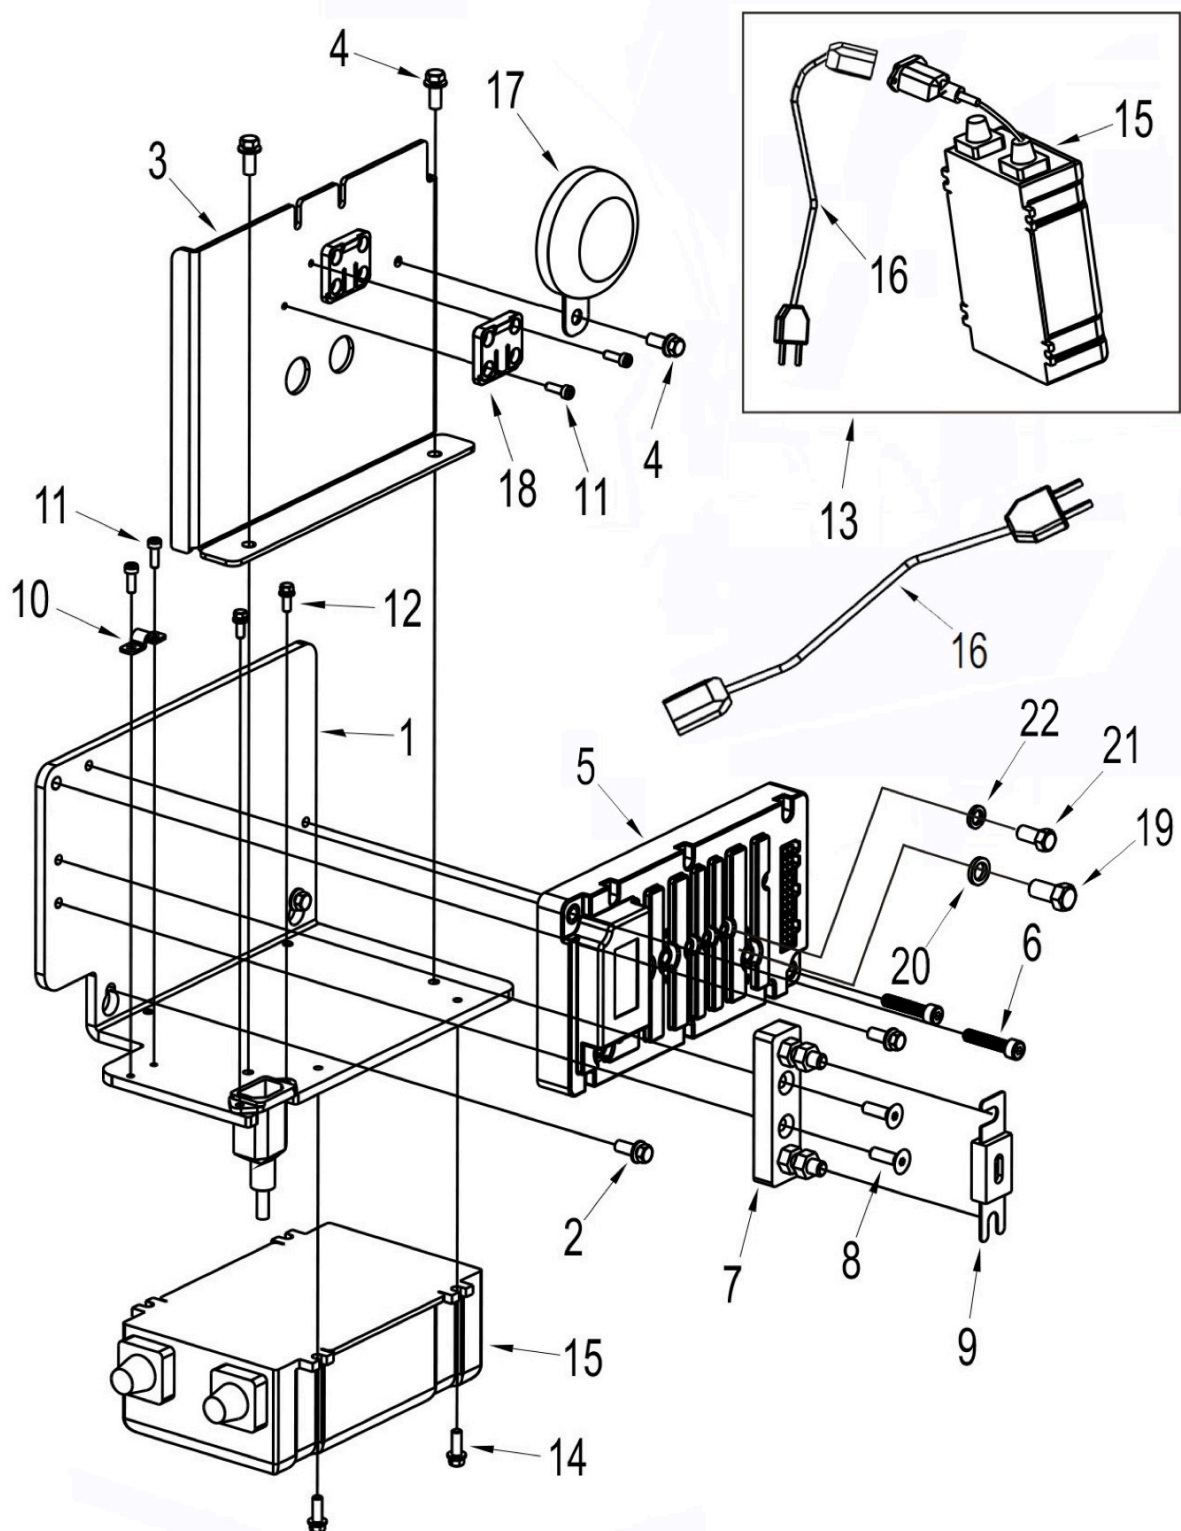


Figure 12 — Electrical panel assembly: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F12-01	Mounting plate		1	SST15+
2	SST-F12-02	Screw M6X16	M6X16	4	SST15+
3	SST-F12-03	Patch panel		1	SST15+
4	SST-F12-04	Screw M6X10	M6X10	3	SST15+
5	SST-F12-05	Controller		1	SST15+
6	SST-F12-06	Screw M6X30	M6X30	2	SST15+
8	SST-F12-08	Screw M6X20	M6X20	2	SST15+
9	SST-F12-09	Fuse	200A	1	SST15+
10	SST-F12-10	Crimping plate		1	SST15+
11	SST-F12-11	Screw M4X8	M4X8	6	SST15+
12	SST-F12-12	Screw M4X12	M4X12	2	SST15+
13	SST-F12-13	Built-in charger with North American plug		1	Confirm with service
14	SST-F12-14	Screw M5X16	M5X16	4	SST15+
15	SST-F12-15	Built-in charger (without plug)		1	Confirm with service
16	SST-F12-16	Plug (North American)		1	SST15+
17	SST-F12-17	Horn		1	SST15+
18	SST-F12-18	Patch panel		1	SST15+
19	SST-F12-19	Screw M5X10	M5X10	4	SST15+
20	SST-F12-20	Washer		4	SST15+
21	SST-F12-21	Screw M4X12	M4X12	2	SST15+
22	SST-F12-22	Washer		2	SST15+

Figure 13 — Load wheel assembly

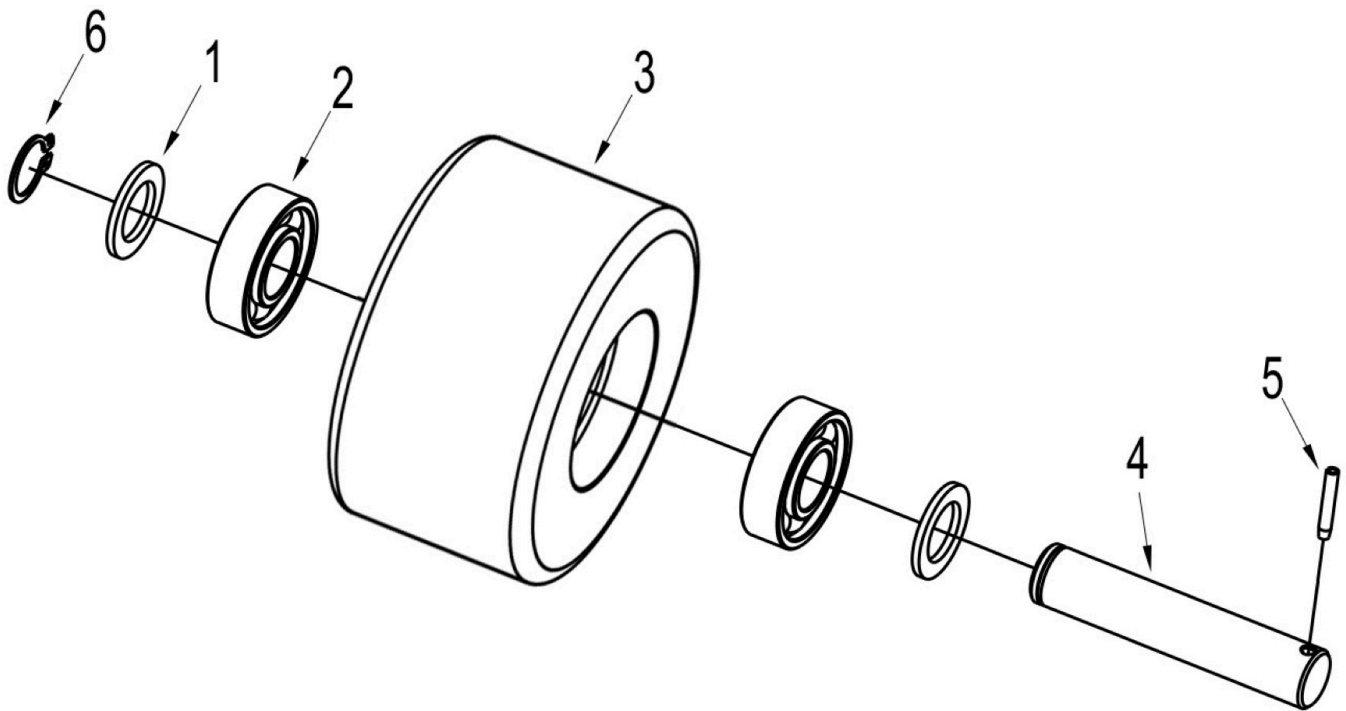


Figure 13 — Load wheel assembly: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F13-01	Washer		2	SST15+
2	SST-F13-02	Bearing 6204-2RS	6204-2RS	2	SST15+
3	SST-F13-03	Load wheel Ø100*64	Ø100*64	1	SST15+
4	SST-F13-04	Axle Ø20*100	Ø20*100	1	SST15+
5	SST-F13-05	Elastic pin Ø4*25	Ø4*25	1	SST15+
6	SST-F13-06	Shaft ring Ø20	Ø20	1	SST15+

Figure 14 — Covers and switch panel

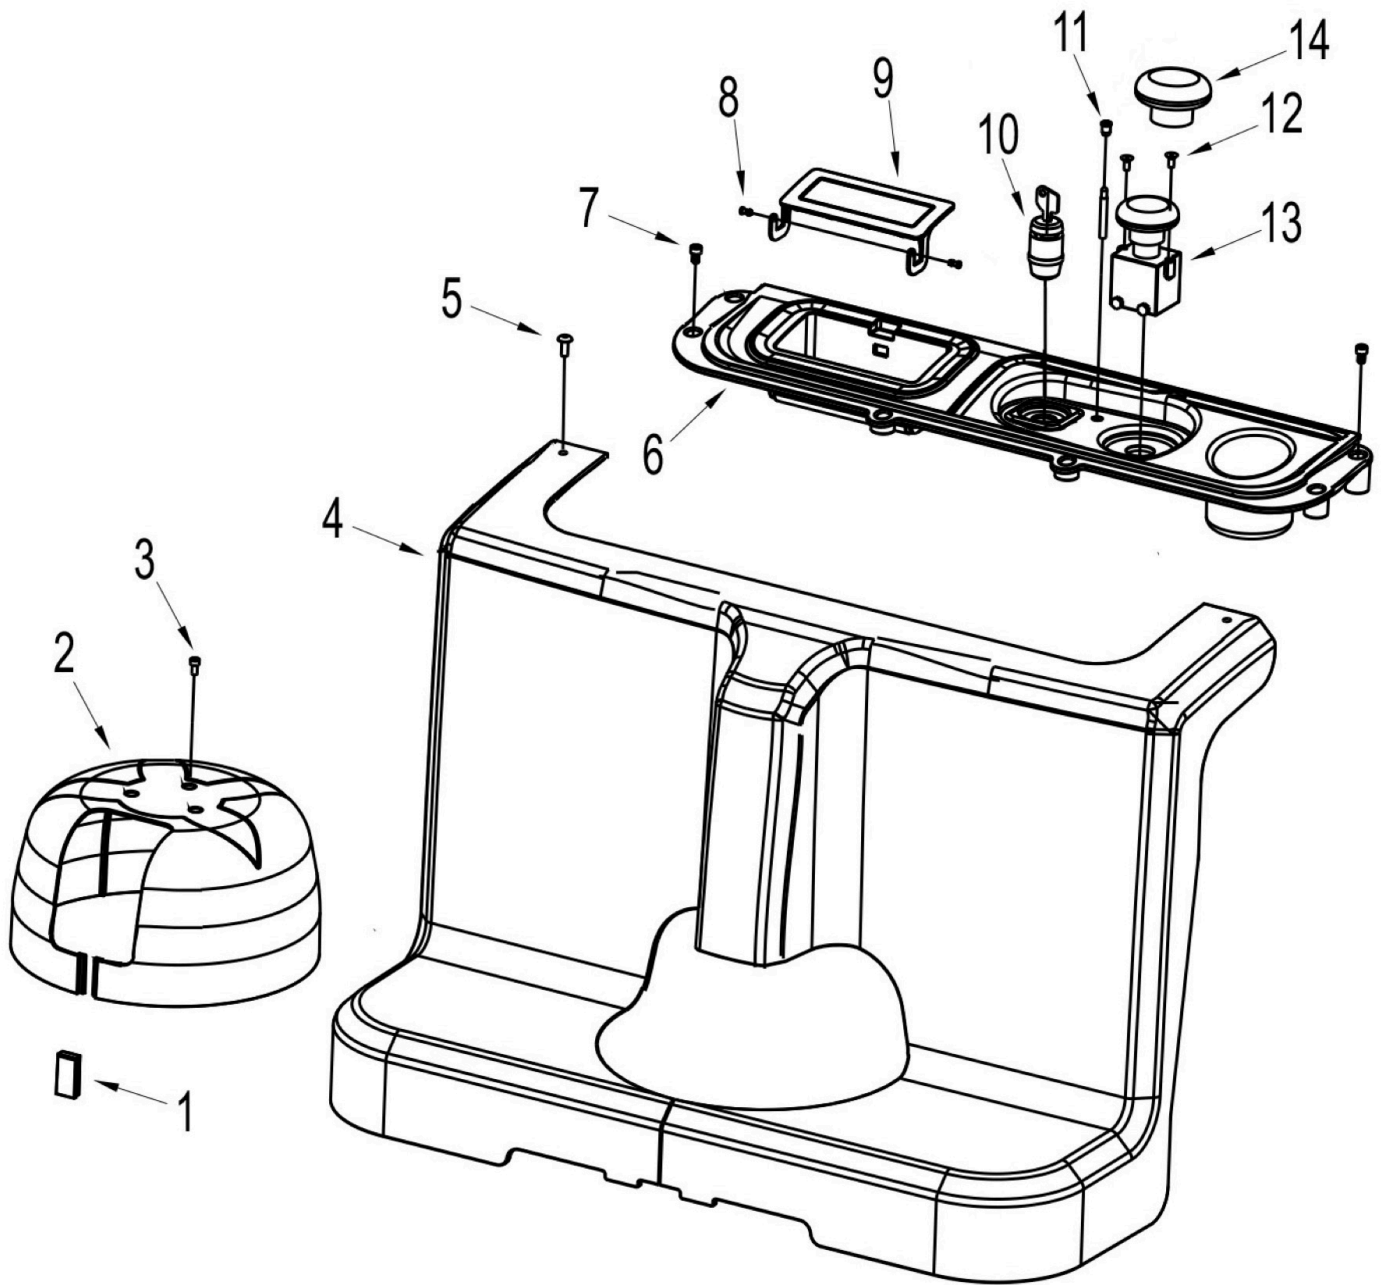


Figure 14 — Covers and switch panel: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F14-01	Fixed block		1	Confirm with service
2	SST-F14-02	Handle socket cover		1	Confirm with service
3	SST-F14-03	Screw M5X10	M5X10	3	Confirm with service
4	SST-F14-04	Rear cover		1	Confirm with service
5	SST-F14-05	Screw M6X16	M6X16	2	Confirm with service
6	SST-F14-06	Upper cover		1	Confirm with service
7	SST-F14-07	Screw M6X10	M6X10	6	Confirm with service
8	SST-F14-08	Pin shaft		2	Confirm with service
9	SST-F14-09	Small cover		1	Confirm with service
10	SST-F14-10	Key switch		1	Confirm with service
11	SST-F14-11	Lamp socket		1	Confirm with service
12	SST-F14-12	Screw M5X12	M5X12	2	Confirm with service
13	SST-F14-13	Emergency stop switch		1	Confirm with service
14	SST-F14-14	Emergency stop button cover		1	Confirm with service

Figure 15 — Inner mast assembly

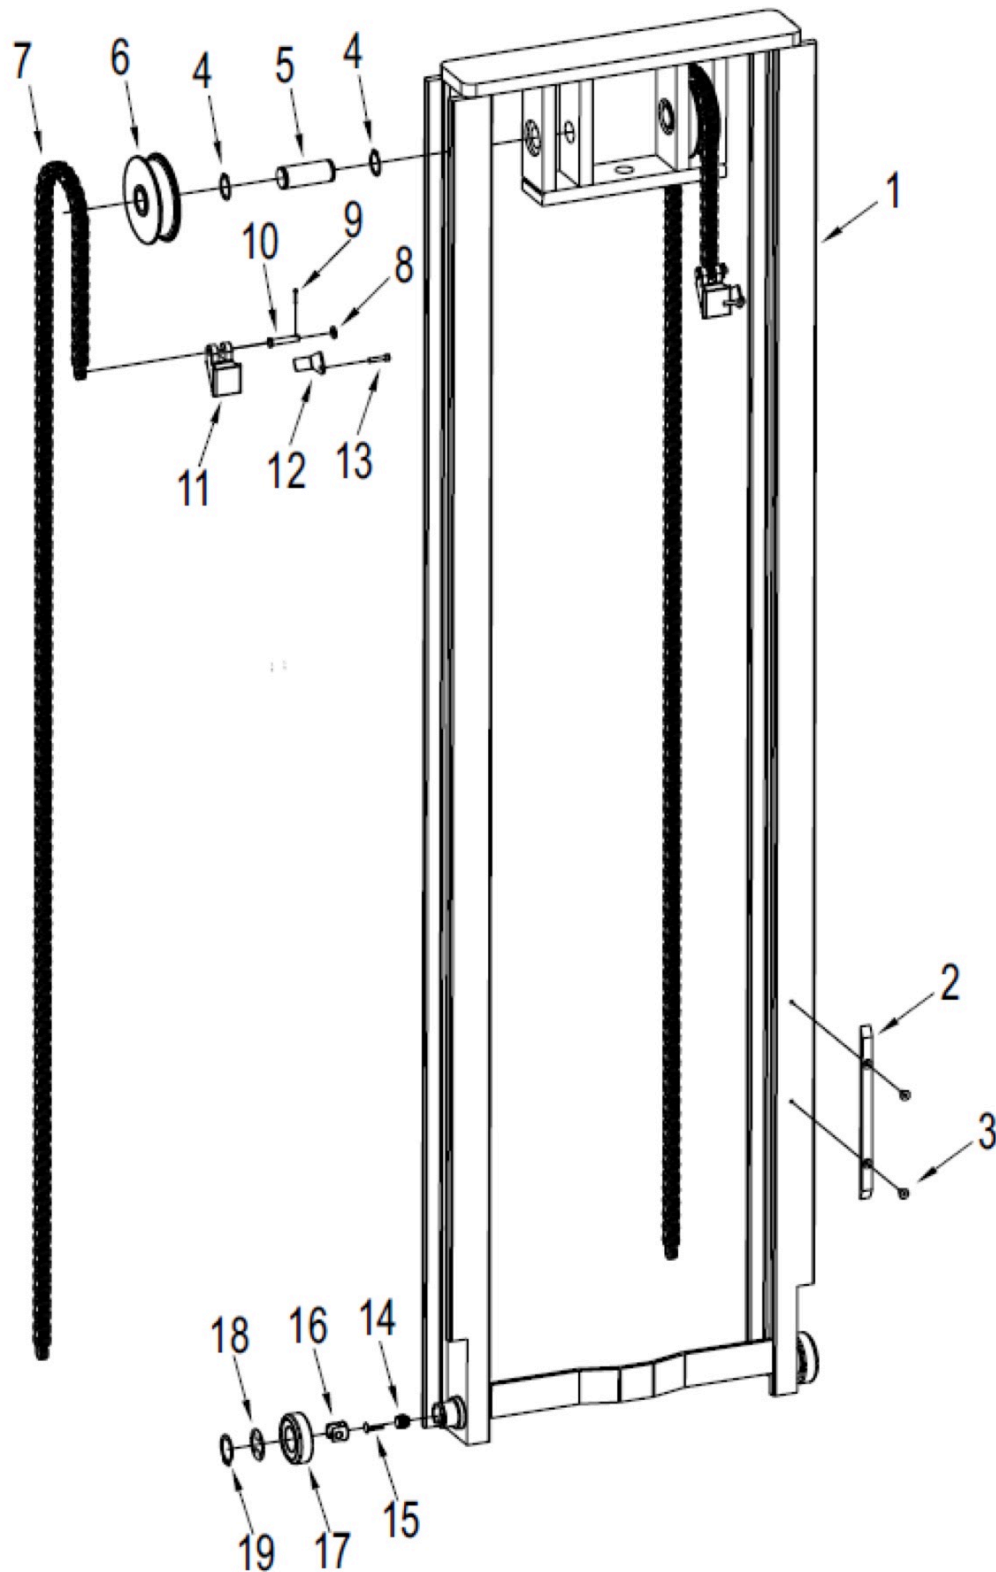


Figure 15 — Inner mast assembly: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F15-01	Inner mast assembly (3.5 m version)		1	SST15+
2	SST-F15-02	Speed limit strip		1	SST15+
3	SST-F15-03	Screw	M6x16	2	SST15+
4	SST-F15-04	Shaft ring	30	4	SST15+
5	SST-F15-05	Roller shaft	Ø30*77	2	SST15+
6	SST-F15-06	Chain roller		2	SST15+
7	SST-F15-07	Chain (3.5 m version)		2	SST15+
8	SST-F15-08	Flat pad	8	2	SST15+
9	SST-F15-09	Cotter pin		2	SST15+
10	SST-F15-10	Axle		2	SST15+
11	SST-F15-11	Pull block		2	SST15+
12	SST-F15-12	Guard		2	SST15+
13	SST-F15-13	Screw	M5X25	2	SST15+
14	SST-F15-14	Adjusting screw M16X15	M16X15	2	SST15+
15	SST-F15-15	Locating piece		2	SST15+
16	SST-F15-16	Small roller assembly		2	SST15+
17	SST-F15-17	Contact roller	Ø70.4*22.5	2	SST15+
18	SST-F15-18	Baffle		2	SST15+
19	SST-F15-19	Shaft ring	35	2	SST15+

Figure 16 — Fork carriage and forks

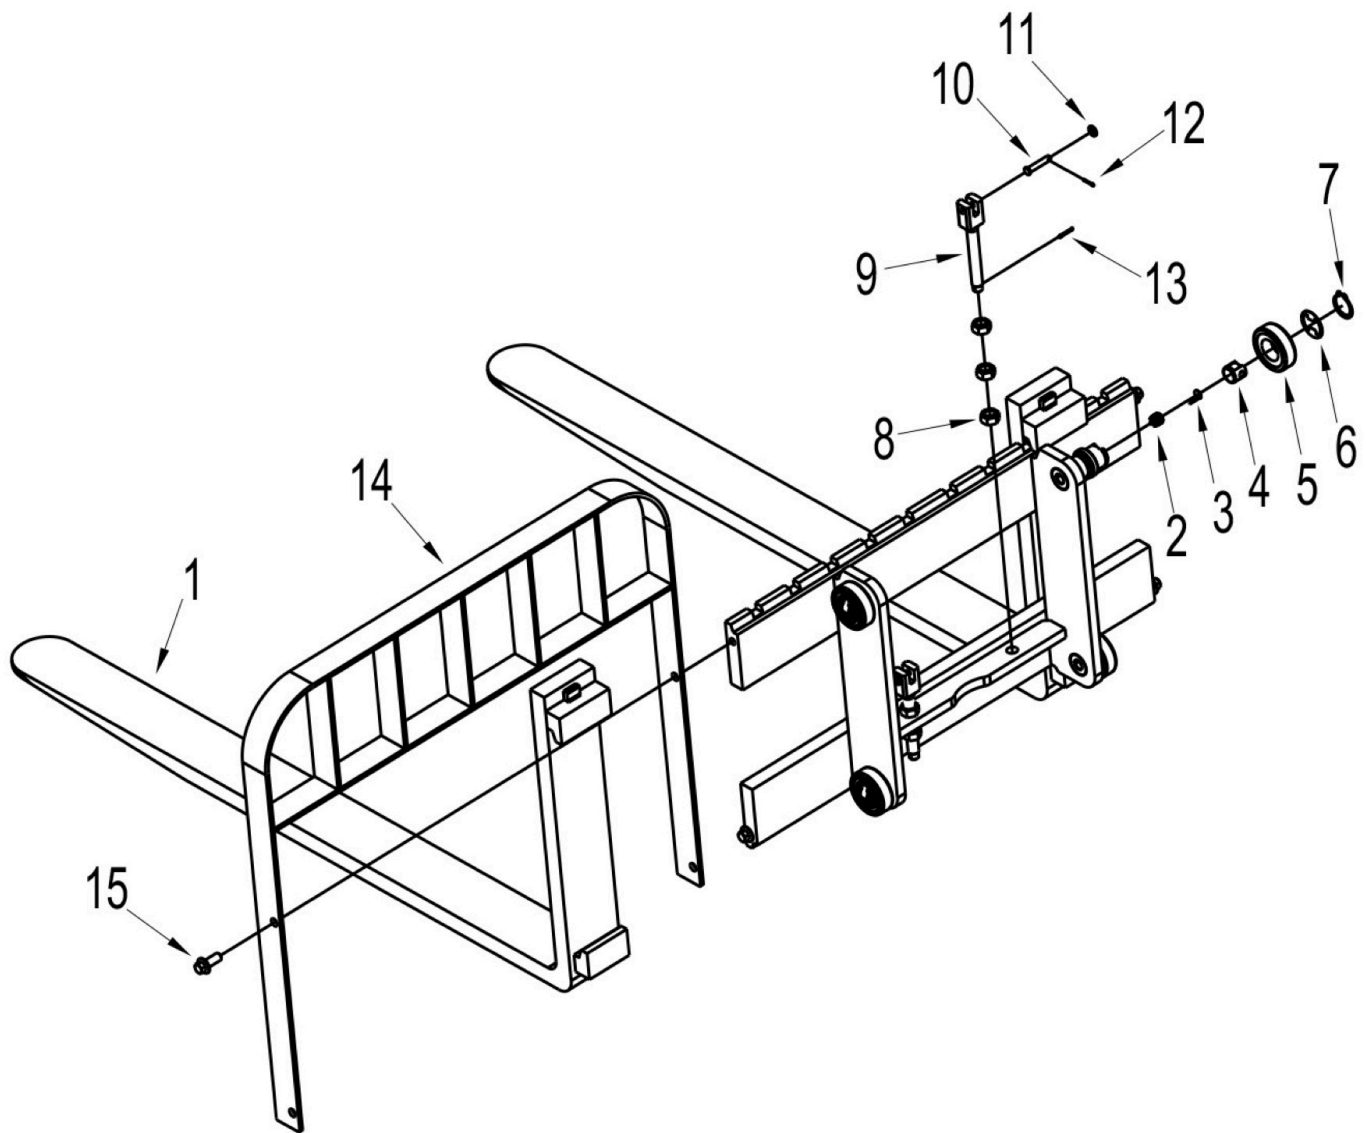


Figure 16 — Fork carriage and forks: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F16-01	Fork, 1070 mm		2	Match your fork size
1B	SST-F16-01B	Fork, 1150 mm		2	Match your fork size
1C	SST-F16-01C	Fork, 1200 mm		2	Match your fork size
2	SST-F16-02	Screw M16X24	M16X24	2	SST15+
3	SST-F16-03	Locating piece		2	SST15+
4	SST-F16-04	Small roller assembly		2	SST15+
5	SST-F16-05	Contact roller	Ø70*22.5	2	SST15+
6	SST-F16-06	Baffle		2	SST15+
7	SST-F16-07	Shaft ring	35	2	SST15+
8	SST-F16-08	Nut M16X1.5	M16X1.5	6	SST15+
9	SST-F16-09	Screw		2	SST15+
10	SST-F16-10	Axle		2	SST15+
11	SST-F16-11	Flat pad	8	2	SST15+
12	SST-F16-12	Cotter pin		2	SST15+
13	SST-F16-13	Cotter pin		2	SST15+
14	SST-F16-14	Backrest		1	SST15+
15	SST-F16-15	Screw M12X30	M12X30	4	SST15+

Figure 17 — Wiring harnesses

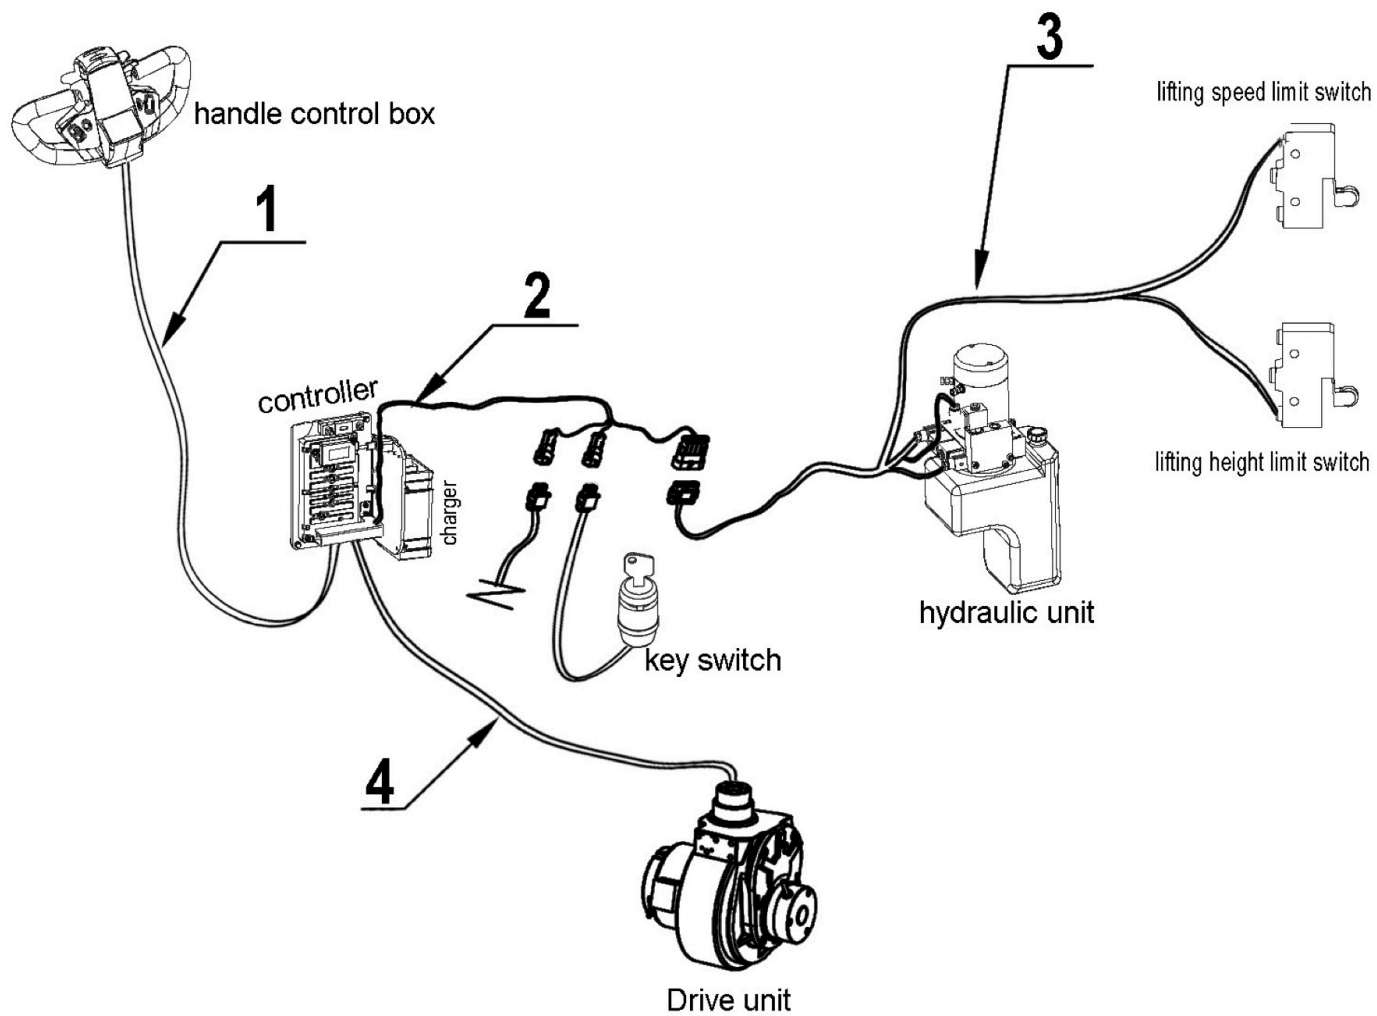


Figure 17 — Wiring harnesses: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F17-01	Handle cables		1	SST15+
2	SST-F17-02	Truck body cable harness-1		1	SST15+
3	SST-F17-03	Truck body cable harness-2		1	SST15+
4	SST-F17-04	Harness for drive motor		1	SST15+

Figure 18 — Power cables and programmer

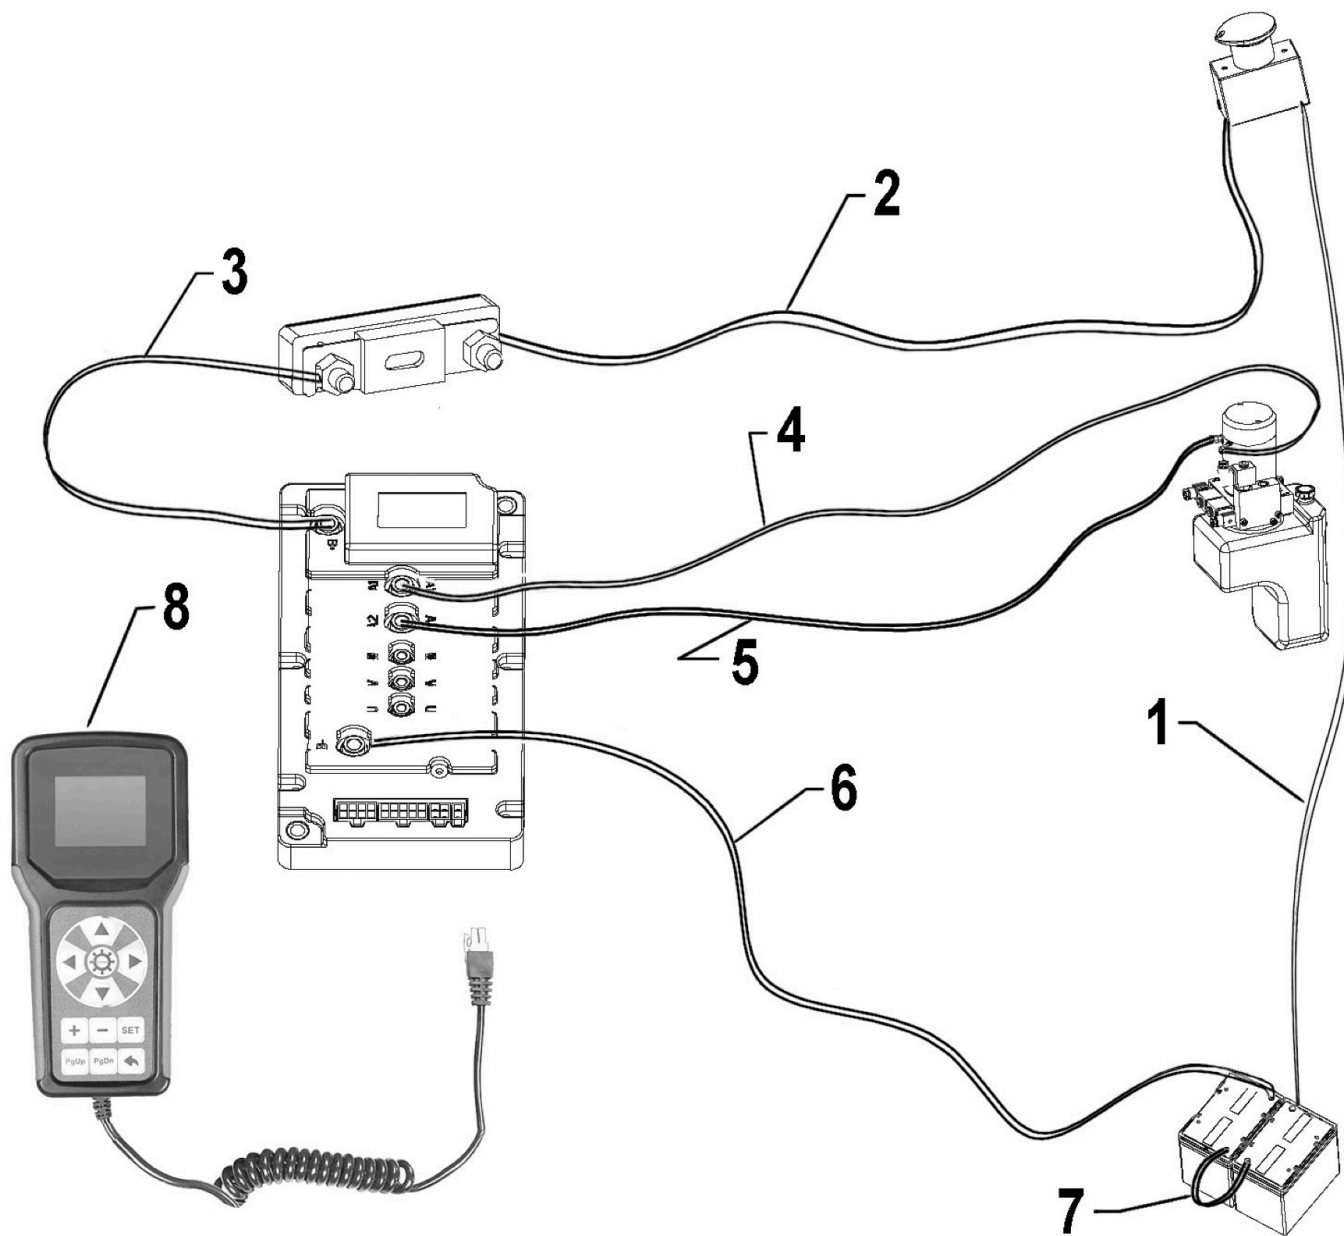


Figure 18 — Power cables and programmer: parts

Item	Sumachay ref.	Description	Spec	Qty	Applies to
1	SST-F18-01	B+ lead wire (Battery to emergency stop switch)	Length 650 mm	1	Confirm with service
2	SST-F18-02	B+ lead wire (Emergency stop switch to fuse)	Length 430 mm	1	SST15+
3	SST-F18-03	B+ lead wire (Fuse to controller)	Length 165 mm	1	SST15+
4	SST-F18-04	B+ lead wire (Controller to hydraulic motor)	Length 635 mm	1	SST15+
5	SST-F18-05	B- lead wire (Controller to hydraulic motor)	Length 565 mm	1	SST15+
6	SST-F18-06	B- lead wire (Battery to controller)	Length 1050 mm	1	Confirm with service
7	SST-F18-07	Battery connection cable	Length 165 mm	1	Confirm with service
8	SST-F18-08	Handheld programmer		1	SST15+